


Load Media in Peel-Off Mode

Refer to [Figure 12](#). This section applies only if the Rewind option or the Peel option is installed.

Figure 12 • Peel-Off Mode

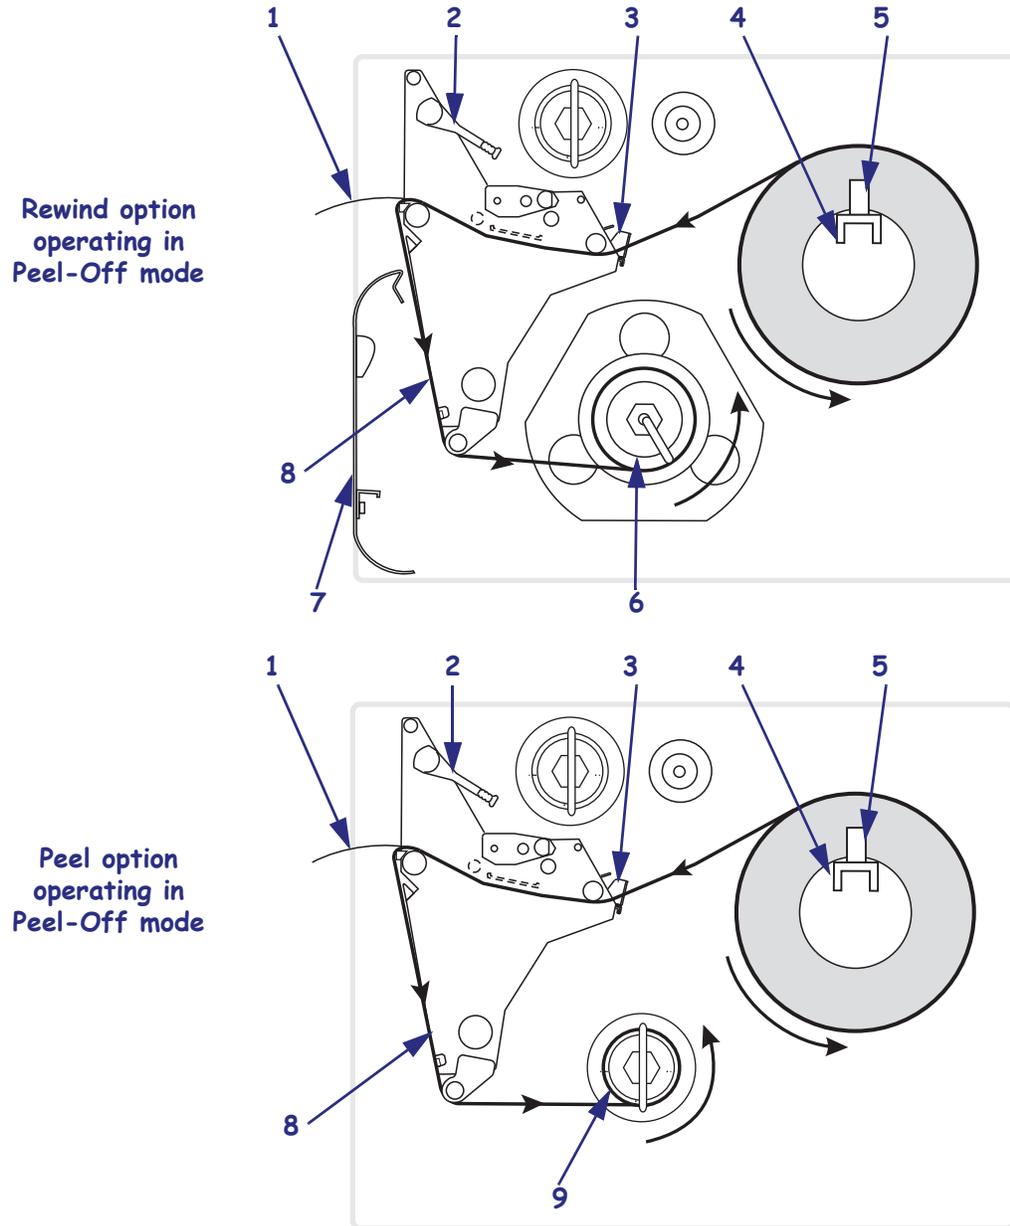



1	Printed label
2	Printhead-open lever
3	Outer media guide
4	Media supply hanger
5	Media supply guide


6	Rewind spindle
7	Rewind plate
8	Media liner
9	Peel spindle

Caution • While performing any tasks near an open printhead, remove all rings, watches, hanging necklaces, identification badges, or other metallic objects that could touch the printhead. You are not required to turn off the printer power when working near an open printhead, but Zebra recommends it as a precaution. If you turn off the power, you will lose all temporary settings, such as label formats, and you must reload them before you resume printing.


To load media in Peel-Off mode, complete these steps:

1. Prepare the printer for Peel-Off mode.

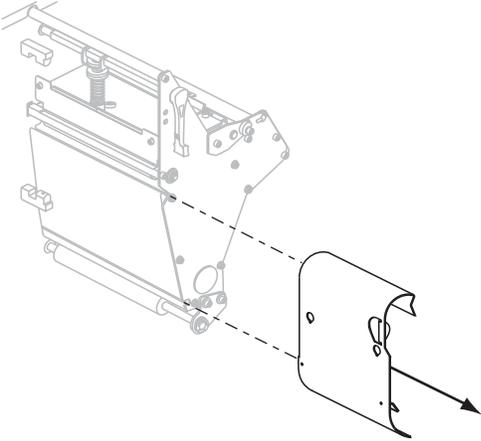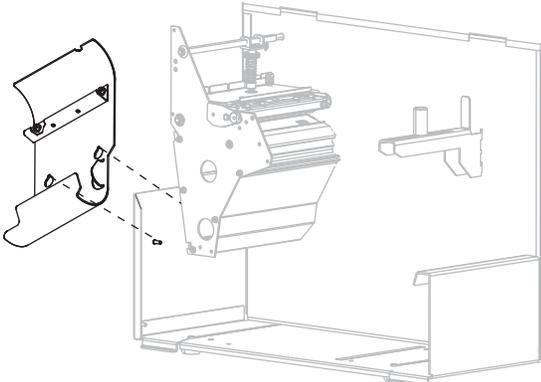
If the printer has the...	Then...
Rewind option	<p>a. If the rewind plate is installed, remove it from the print mechanism.</p>  <p>b. Hang the rewind plate upside-down on the two mounting screws on the inside of the front panel. Secure the rewind plate to the front panel with two thumb nuts.</p> 

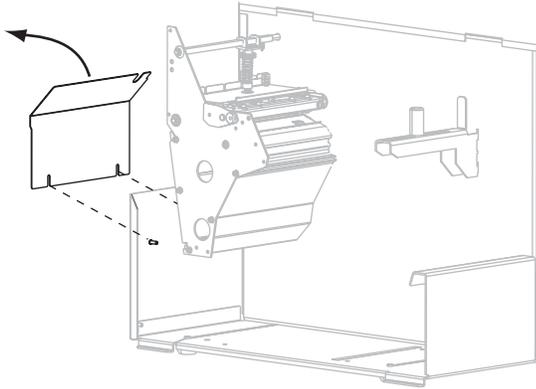If the printer has the...	Then...
Peel option	<p>a. Remove the two thumb nuts that secure the front cover bracket to the mounting screws on the inside of the front panel.</p> <p>b. Remove the front cover bracket from the printer and store it.</p> 


2. Set the printer to Peel-Off mode. See *Select Print Mode* on page 89 for instructions.
3. Insert media into the printer. See *Insert Media into the Printer* on page 39 for instructions.
4. Open the printhead assembly by rotating the printhead open lever counterclockwise.

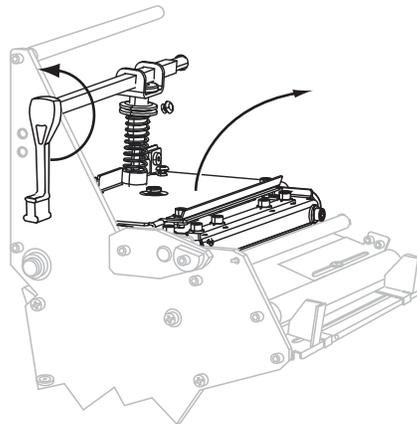


5. Loosen the thumb screw on the bottom of the outer media guide (not visible from this angle).

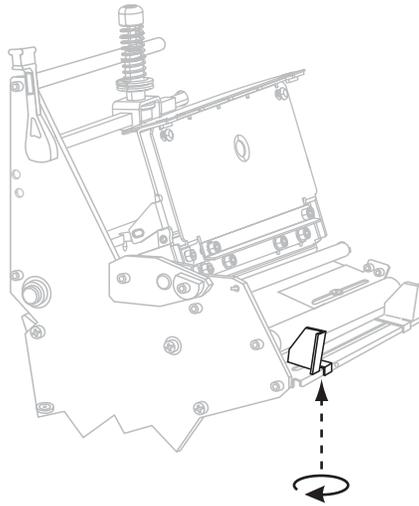


6. Slide the outer media guide all the way out.

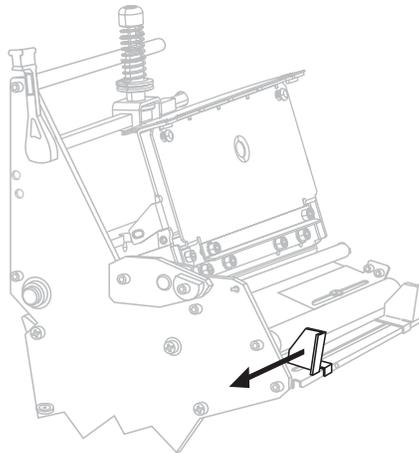


7. Thread the media past the inner media guide (1). Continue under the lower roller (2) and the upper media sensor (3). Ensure that the media touches the inner media guide.

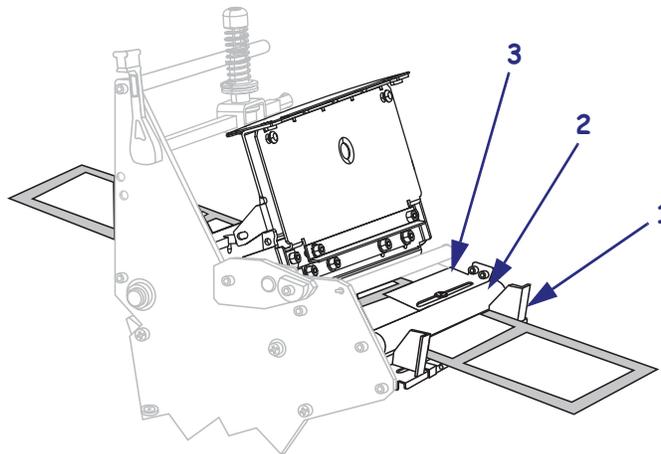





8. Thread the media forward until it passes under the printhead assembly (1), under the snap plate (2), over the platen roller (3), and out the front of the printer (4).




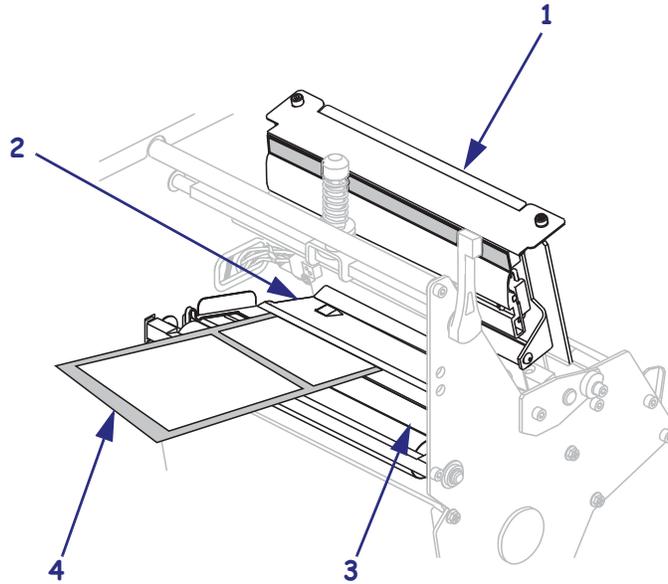


9. Extend approximately 36 in. (920 mm) of media out of the printer. Remove and discard the labels from this exposed media.

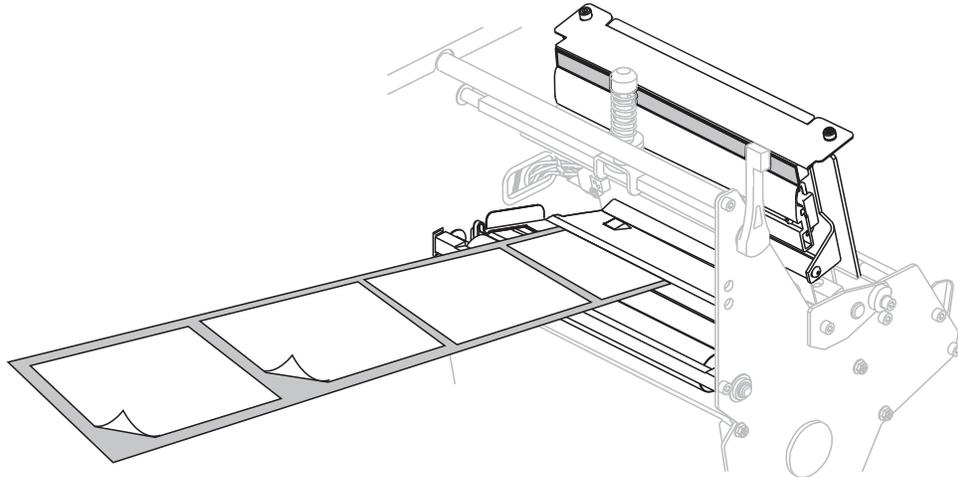


10. Wind the media liner around the rewind or peel spindle as instructed.

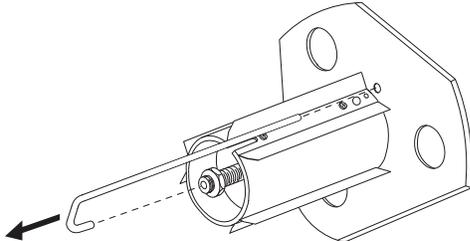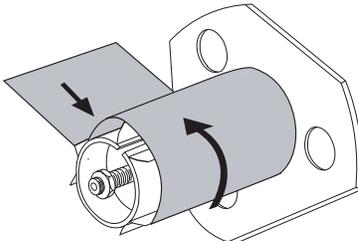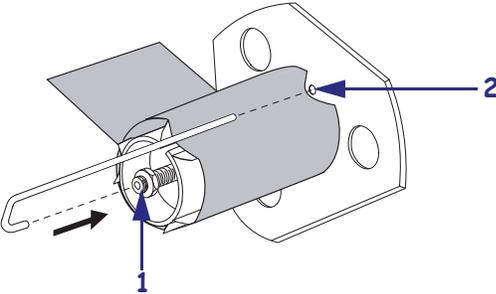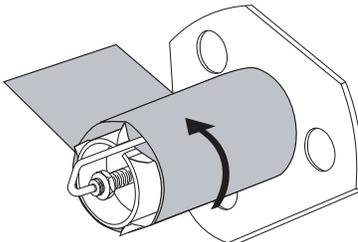
For the...	Then...
Rewind option	<p data-bbox="678 336 1412 430"> Note • You may opt to install a core on the rewind spindle for the used media liner. However, a core is not required and typically is not used for peel-off mode.</p> <p data-bbox="678 441 1201 472">a. Remove the hook from the rewind spindle.</p>  <p data-bbox="678 766 1372 829">b. Wind the media liner counterclockwise around the rewind spindle.</p>  <p data-bbox="678 1123 1404 1218">c. Reinstall the hook. Insert the short end of the hook into the hole in the center of the adjusting nut (1). Insert the long end of the hook into the small hole on the guide plate (2).</p>  <p data-bbox="678 1575 1404 1638">d. Rotate the spindle counterclockwise several turns to wind the media liner over the hook and remove any slack.</p> 

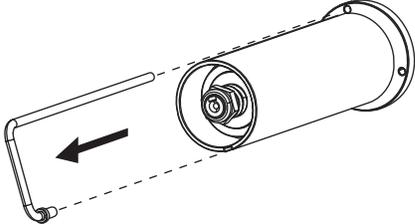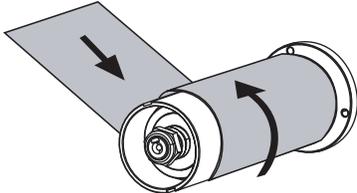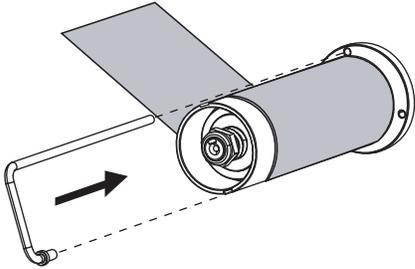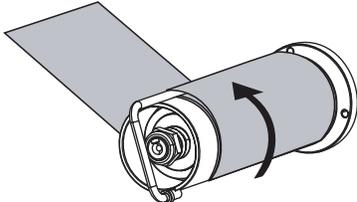For the...	Then...
Peel option	<p data-bbox="667 262 1432 304">a. Remove the hook from the peel spindle.</p>  <p data-bbox="667 577 1432 640">b. Wind the media liner counterclockwise around the peel spindle.</p>  <p data-bbox="667 888 1432 982">c. Reinstall the hook. The short end of the hook fits into the notch on the peel spindle. The long end of the hook fits into the groove on the opposite side of the notch.</p>  <p data-bbox="667 1304 1432 1367">d. Rotate the spindle counterclockwise several turns to wind the media liner over the hook and remove any slack.</p> 


11. Align the media with the inner media guide (1). Slide in the outer media guide (2) until it just touches the edge of the media.

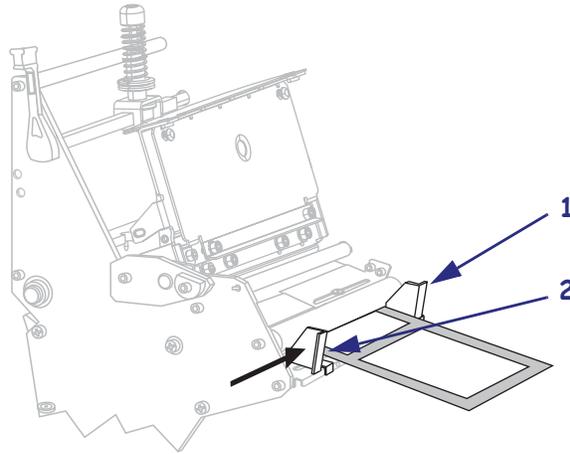

12. Tighten the thumb screw on the bottom of the outer media guide (not visible from this angle).

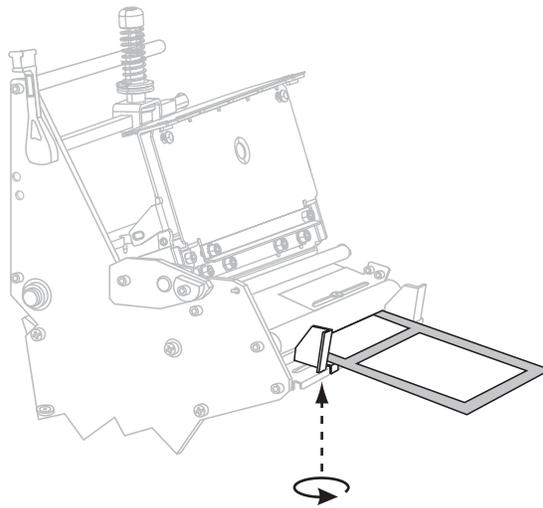

13. Push the printhead assembly down (1), and then rotate the printhead-open lever clockwise until it locks into place (2).

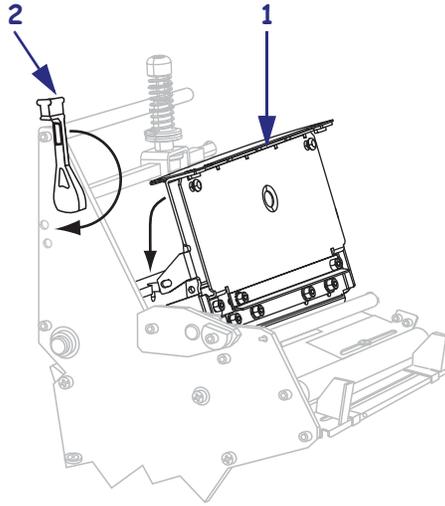

Remove Media Liner from the Rewind or Peel Spindle





Rewind mode and Peel-Off mode each use spindles to wind used media liner. Remove the media liner from the spindle each time that you change labels.




Important • It is **not** necessary to turn off the power to remove media liner from the spindles. If power is turned off, all label formats and images, as well as any temporarily saved parameter settings stored in the printer's internal memory, are lost. When power is turned back on, these items must be reloaded.

To remove media liner from the rewind or peel spindle, complete these steps:


1. Has the media run out?

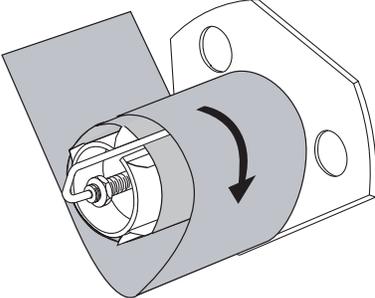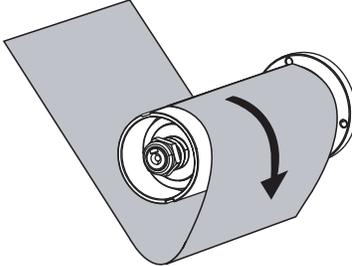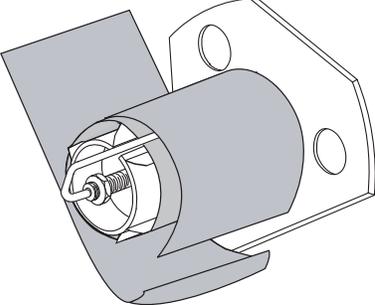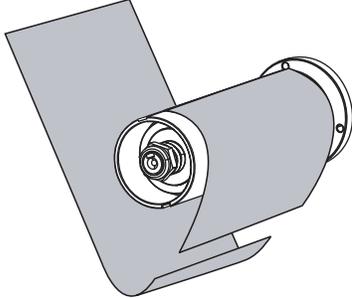If...	Then...
No	<p data-bbox="594 716 1333 779">a. Create slack in the media liner by rotating the spindle slightly clockwise.</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p data-bbox="781 793 870 825">Rewind</p>  </div> <div style="text-align: center;"> <p data-bbox="1219 793 1276 825">Peel</p>  </div> </div> <p data-bbox="594 1178 1097 1209">b. Cut or tear the media liner at the spindle.</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p data-bbox="781 1224 870 1255">Rewind</p>  </div> <div style="text-align: center;"> <p data-bbox="1219 1224 1276 1255">Peel</p>  </div> </div>
Yes	Continue with the next step.

2. Pull out the spindle hook.

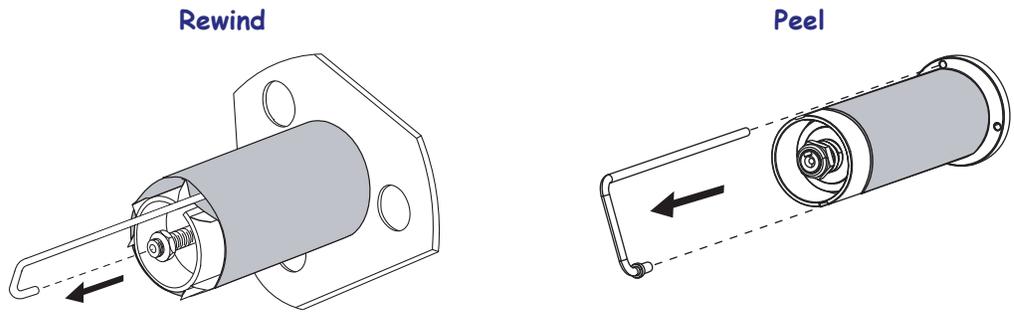

3. Slide the media liner off of the spindle and discard.

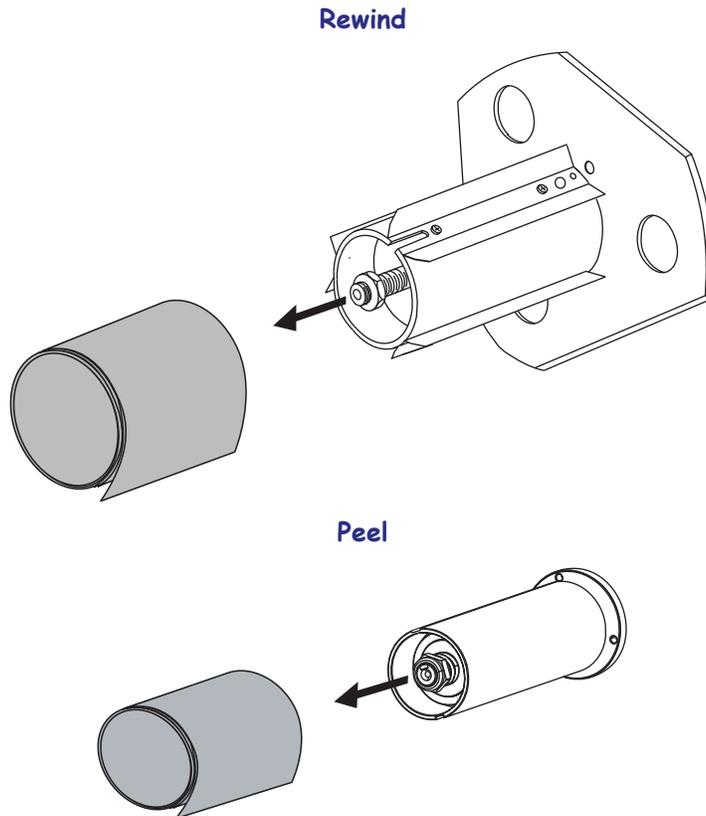


Insert Media into the Printer

This section shows how to insert roll or fanfold media into the printer. Fanfold media is loaded the same way as roll media.


Roll Media

To insert roll media, complete these steps:


1. Remove and discard any tags or labels that are dirty or that are held by adhesives or tape.

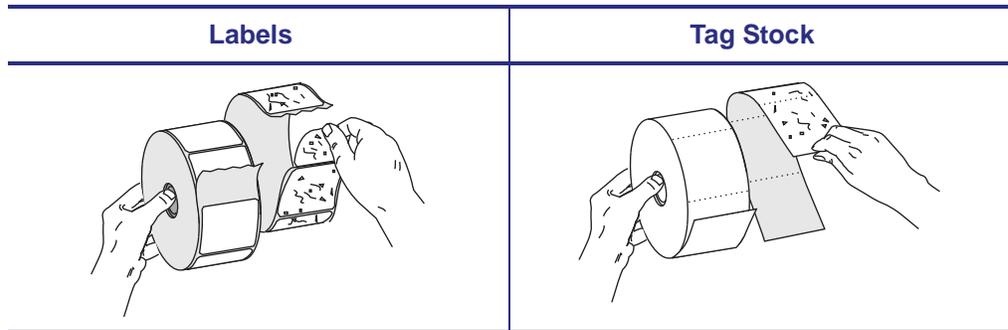


2. Pull out the media supply guide as far as it goes.

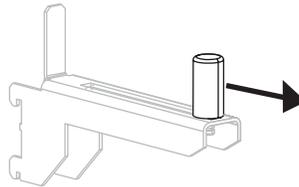

3. Place the roll of media on the media supply hanger. Push the roll as far back as it will go.

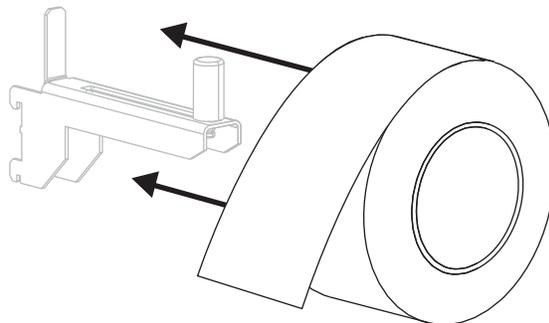

4. Slide in the media supply guide until it touches the edge of the roll.

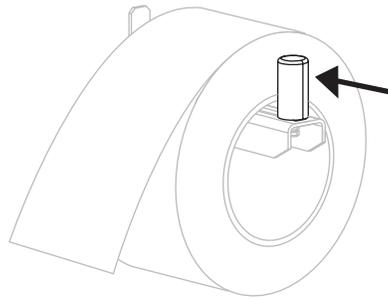

Fanfold Media

To load fanfold media, complete these steps:

1. Thread the fanfold media through the rear access slot (1) or the bottom access slot (2).
Using the media supply hanger is optional.

Figure 9 • Rear Feed Using Media Supply Hanger


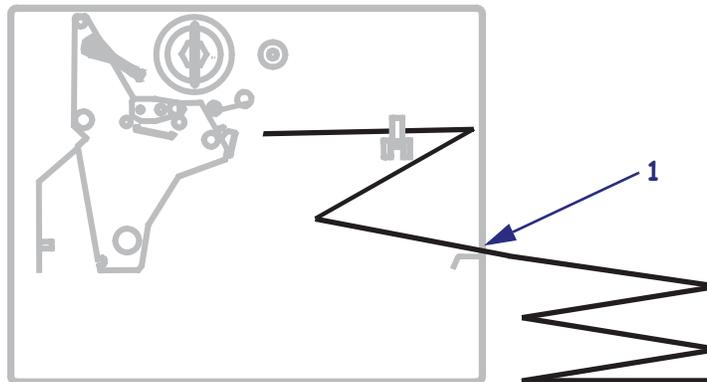


Figure 10 • Bottom Feed Without Using Media Supply Hanger

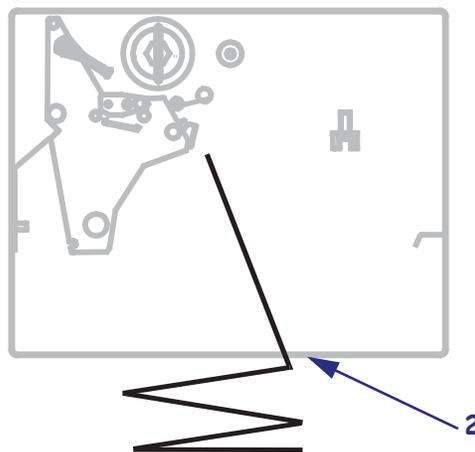

2. Do you wish to use the media supply guide?

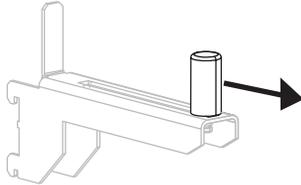
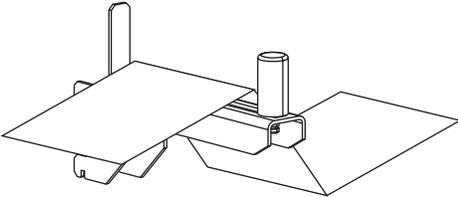
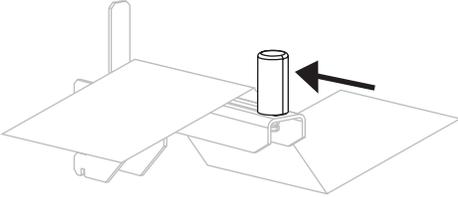
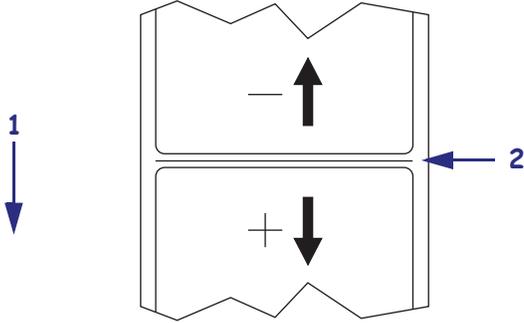
If...	Then...
No	Continue with the media loading procedure for the desired print mode.
Yes	<p data-bbox="531 369 1120 401">a. Pull the media supply guide out as far as it goes.</p>  <p data-bbox="531 636 1105 667">b. Drape the media over the media supply hanger.</p>  <p data-bbox="531 915 1390 978">c. Slide in the media supply guide until it touches, but does not restrict, the edge of the media.</p> 

Table 10 • Printer Parameters (Page 2 of 19)

Parameter	Action/Explanation				
<div style="border: 1px solid black; padding: 5px; display: inline-block;"> TEAR OFF +000 - ■■■■■ + </div>	<p>Adjust the Tear-Off Position</p> <p>This parameter establishes the position of the media over the tear-off/peel-off bar after printing.</p> <p>See Figure 18. Higher numbers move the media out (the tear line moves closer to the leading edge of the next label), and lower numbers move the media in (the tear line moves closer to the edge of the label just printed).</p> <div style="text-align: center;"> <p>Figure 18 • Tear-Off Position Adjustment</p>  <table border="1" data-bbox="699 989 1300 1066" style="margin-left: auto; margin-right: auto;"> <tr> <td style="text-align: center;">1</td> <td>Media direction</td> </tr> <tr> <td style="text-align: center;">2</td> <td>Factory-set tear line location at position 00</td> </tr> </table> </div> <p>Default: +0 Range: -120 to +120</p> <p>To change the value shown:</p> <ol style="list-style-type: none"> 1. Press PLUS (+) to increase the value. Each press adjusts the tear-off position by four dot rows. 2. Press MINUS (-) to decrease the value. Each press adjusts the tear-off position by four dot rows. 	1	Media direction	2	Factory-set tear line location at position 00
1	Media direction				
2	Factory-set tear line location at position 00				
<div style="border: 1px solid black; padding: 5px; display: inline-block;"> PRINT MODE -TEAR-OFF + </div>	<p>Select Print Mode</p> <p>Print mode settings tell the printer the method of media delivery that you wish to use. Make sure that your printer can support the selected option.</p> <p>Default: TEAR-OFF Selections: TEAR-OFF, PEEL-OFF, CUTTER, REWIND</p> <p>To change the value shown:</p> <ol style="list-style-type: none"> 1. Press PLUS (+) or MINUS (-) to scroll through the options. 				