



Table 10 • Printer Parameters (Page 3 of 19)

Parameter	Action/Explanation
<p>MEDIA TYPE -NON-CONTINUOUS +</p>	<p>Set Media Type</p> <p>This parameter tells the printer the type of media that you are using (see <i>Types of Media</i> on page 33 for more information). Selecting continuous media requires that you include a label length instruction in your label format (^Lxxxxx if you are using ZPL or ZPL II).</p> <p>When non-continuous media is selected, the printer feeds media to calculate label length (the distance between two recognized registration points of the inter-label gap, webbing, or alignment notch or hole).</p> <p>Default: NON-CONTINUOUS</p> <p>Selections: CONTINUOUS, NON-CONTINUOUS</p> <p>To change the value shown:</p> <ol style="list-style-type: none"> 1. Press PLUS (+) or MINUS (-) to toggle between the options.
<p>SENSOR TYPE -WEB +</p>	<p>Set the Sensor Type</p> <p> Note • The black mark sensor is a purchasable option.</p> <p>This parameter tells the printer whether you are using media with a web (gap/space between labels, notch, or hole) to indicate the separations between labels or if you are using media with a black mark printed on the back. If your media does not have black marks for registration on the back, leave your printer at the default (WEB).</p> <p>Default: WEB</p> <p>Selections: WEB, MARK</p> <p>To change the value shown:</p> <ol style="list-style-type: none"> 1. Press PLUS (+) or MINUS (-) to toggle between the options.
<p>PRINT METHOD -THERMAL-TRANS. +</p>	<p>Select Print Method</p> <p>The print method parameter tells the printer the method of printing that you wish to use: direct thermal (no ribbon) or thermal transfer (using thermal transfer media and ribbon).</p> <p>Default: THERMAL TRANSFER</p> <p>Selections: THERMAL TRANSFER, DIRECT THERMAL</p> <p> Note • Selecting direct thermal when using thermal transfer media and ribbon creates an error condition, but printing continues.</p> <p>To change the value shown:</p> <ol style="list-style-type: none"> 1. Press PLUS (+) or MINUS (-) to toggle between the options.