

Tools

Table 6 • Tools








<p>Print Information</p> <p><i>User menu item:</i></p>	<p>Print the specified information on one or more labels.</p>
	<p>Main Menu >  TOOLS</p> <div data-bbox="878 464 1325 716" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p style="text-align: center;">PRINT INFORMATION</p> <p style="text-align: center;">▼ SETTINGS ▲</p> <hr/> <p style="display: flex; justify-content: space-between;">PRINT</p> </div> <p>Main Menu >  NETWORK</p> <div data-bbox="878 800 1325 1052" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p style="text-align: center;">PRINT INFORMATION</p> <p style="text-align: center;">▼ NETWORK ▲</p> <hr/> <p style="display: flex; justify-content: space-between;">PRINT</p> </div> <p>Main Menu >  SENSORS</p> <div data-bbox="878 1142 1325 1394" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p style="text-align: center;">PRINT INFORMATION</p> <p style="text-align: center;">▼ SENSOR PROFILE ▲</p> <hr/> <p style="display: flex; justify-content: space-between;">PRINT</p> </div>
<p>(Continued on next page.)</p>	

Table 6 • Tools (Continued)

<p>Print Information (continued)</p>	<p><i>Accepted values:</i></p>	<ul style="list-style-type: none"> • SETTINGS—prints the printer configuration label. • NETWORK—prints the settings for any print server that is installed. • FORMATS—prints the available formats stored in the printer’s RAM, Flash memory, or optional memory card. • IMAGES—prints the available images stored in the printer’s RAM, Flash memory, or optional memory card. • FONTS—prints the available fonts in the printer, including standard printer fonts plus any optional fonts. Fonts may be stored in RAM or Flash memory. • BARCODES—prints the available bar codes in the printer. Bar codes may be stored in RAM or Flash memory. • ALL—prints the previous six labels. • SENSOR PROFILE—shows the sensor settings compared to actual sensor readings. To interpret the results, see <i>Sensor Profile on page 199</i>.
	<p><i>Related ZPL command(s):</i></p>	<p>SETTINGS: ~WC NETWORK: ~WL SENSOR PROFILE: ~JG Others: ^WD</p>
	<p><i>Control panel key(s):</i></p>	<p>SETTINGS and NETWORK: Do one of the following:</p> <ul style="list-style-type: none"> • Hold CANCEL during printer power-up. • Hold FEED + CANCEL for 2 seconds when the printer is in the Ready state. <p>SENSOR PROFILE: Hold FEED + CANCEL during printer power-up.</p>
	<p><i>Printer web page:</i></p>	<p>View and Modify Printer Settings > Print Listings on Label</p>
<p>LCD Contrast</p>	<p>Change the contrast on the printer’s display. (Does not display on the color screen option.)</p>	<p><i>User menu item:</i></p> <p>Main Menu >  TOOLS</p> <div data-bbox="875 1564 1325 1820" style="border: 1px solid black; padding: 10px; text-align: center;"> <p>LCD CONTRAST</p> <p>▼ 10 ▲</p> <hr/> <p>▲</p> </div> <p><i>Accepted values:</i></p> <p>3 to 15</p> <p><i>SGD command used:</i></p> <p>display.contrast</p>