


Table 1 • Print Settings (Continued)


Print Width	Specify the width of the labels being used. The default value is the maximum width for the printer, based on the printhead's DPI value.	
		Note • Setting the width too narrow can result in portions of a label format not being printed on the media. Setting the width too wide wastes formatting memory and can cause the printer to print off of the label and onto the platen roller. This setting can affect the horizontal position of the label format if the image was inverted using the ^POI ZPL II command.
	<i>Accepted values:</i>	0000 to 1248 dots
	<i>Related ZPL command(s):</i>	^PW
	<i>SGD command used:</i>	ezpl.print_width
	<i>User menu item:</i>	PRINT WIDTH on page 95
<i>Printer web page:</i>	View and Modify Printer Settings > Media Setup > Print Width	
Print Mode	Select a print mode that is compatible with your printer options. For information about how the print mode selections work with different printer options, see Select a Print Mode on page 30 .	
	<i>Accepted values:</i>	<ul style="list-style-type: none"> • TEAR OFF • CUTTER • PEEL (use this value for peel-off or liner take-up printing) • RFID (use when printing batches of RFID labels to increase throughput time)
	<i>Related ZPL command(s):</i>	^MM
	<i>SGD command used:</i>	media.printmode
	<i>User menu item:</i>	PRINT MODE on page 95
	<i>Printer web page:</i>	View and Modify Printer Settings > General Setup > Print Mode
Label Left Position	If necessary, shift the print position horizontally on the label. Positive numbers move the left edge of the image toward the center of the label by the number of dots selected, while negative numbers move the left edge of the image toward the left edge of the label.	
	<i>Accepted values:</i>	–9999 to 9999
	<i>Related ZPL command(s):</i>	^LS
	<i>SGD command used:</i>	zpl.left_position
	<i>User menu item:</i>	LEFT POSITION on page 95
	<i>Printer web page:</i>	View and Modify Printer Settings > Advanced Setup > Left Position

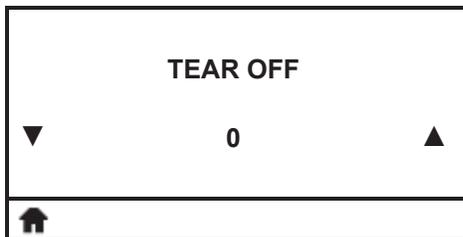

Adjust the Tear-Off Position

If necessary, adjust the position of the media over the tear-off bar after printing.


See [Tear-Off Position](#) on page 68 for more information.

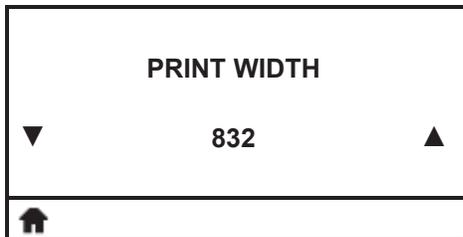

Adjust the Print Width

Specify the width of the labels being used. The default value is the maximum width for the printer, based on the printhead's DPI value.


See [Print Width](#) on page 69 for more information.

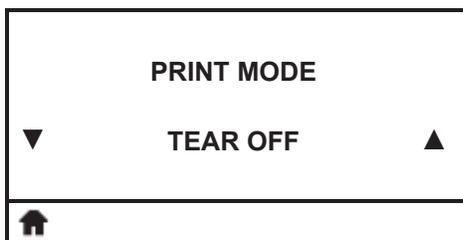

Select the Print Mode

Select a print mode that is compatible with your printer options.


See [Print Mode](#) on page 69 for more information.

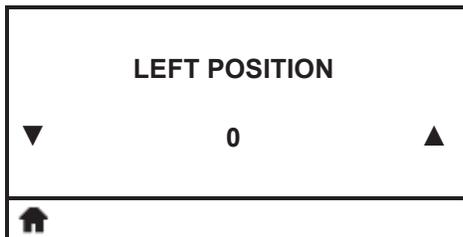

Adjust the Label Left Position

If necessary, shift the print position horizontally on the label. Positive numbers move the left edge of the image toward the center of the label by the number of dots selected, while negative numbers move the left edge of the image toward the left edge of the label.

See [Label Left Position](#) on page 69 for more information.

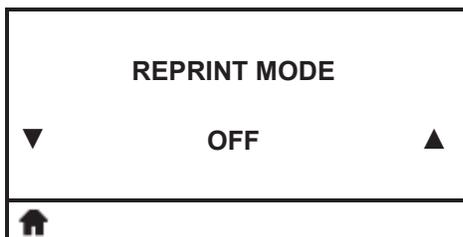

Set the Reprint Mode

When reprint mode is enabled, you can reprint the last label printed either by issuing certain commands or by pressing the LEFT ARROW on the control panel.

See [Reprint Mode](#) on page 70 for more information.