

Print a Network Configuration Label

If you are using a print server, you can print a network configuration label after the printer is connected to the network.

To print a network configuration label, complete these steps:

1. On the control panel, press SETUP/EXIT.
2. Press NEXT/SAVE or PREVIOUS to scroll through the parameters until you reach **LIST NETWORK**.
3. Press PLUS (+) to confirm printing.

A network configuration label prints (Figure 13). An asterisk designates whether the wired or wireless print server is active. If no wireless print server is installed, the wireless portion of the label does not print.

Figure 13 • Network Configuration Label (with a Wireless Print Server installed)

