

## UQ

### Configuration Inquiry

**Description** Use this command to send the printer configuration information back to the host via the serial port.

The printer will send the printer configuration, line by line, in ASCII to the host through the RS-232 port. The information matches the configuration information printed in final phase of the printer's AutoSense routine, the Dump Mode Printout or the U command printout.

The information and number of lines of data sent by the printer will vary from printer to printer depending upon the type of printer and options installed.

**Syntax** UQ

**Parameters** There are no parameters for this format.



**Example •**

UQ↵