

^default

Set Printer to Factory Defaults

Description Use this command to return the printer to its default configuration.

The `^default` command resets the density, speed, sensors, image buffer parameters, character code page (including re-mapped characters), options, feed button behaviors, gap mode media sensing, serial interface configuration, error reporting and line mode configuration defaults.

This command is intended for troubleshooting and by service organizations. Do not use this command in regular programming! Do not use this command to initialize the printer! This overwrites all stored parameters. The programmer should always minimize writing to the non-volatile 'flash' printer memory.

Supported by firmware versions 4.30 and above.

Syntax `^default`

Parameters There are no parameters for this format.