


Insert Media Cartridge


For more information about media cartridges and wristbands, see [Media Cartridges and Wristbands](#) on page 20.

To insert a media cartridge, complete these steps:

1. Orient the cartridge and the printer as shown.

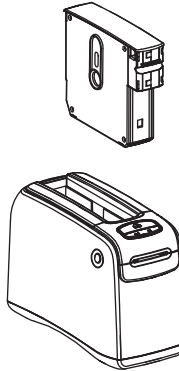

2. Insert the cartridge into the printer, and then press down until the cartridge clicks.

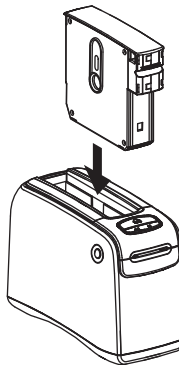

The printer prepares a wristband for printing. With a new cartridge, the printer status indicator (1) turns green, and the media status indicator (2) remains off. For other media conditions, see [Media Status Indicator](#) on page 34.

