

5: ZXP Series Toolbox Configuration

Firmware and Lookup Tables



Note • Access to this feature is controlled via Advanced Security > Security Roles.

The Firmware and Lookup Tables screen allows you to install firmware. This screen also allows you to save, restore, and install Lookup Tables (LUT).

ZXP Toolbox - Zebra ZXP Series 8 USB Card Printer

ZXP Toolbox

Information

- Printer
- Printer Sensors
- Media
- Laminator
- Wired Network

Configuration

- Job Log
- Save/Restore
- Firmware and Lookup Tables**
- Printer Settings

Cleaning

- Clean Printer
- Clean Laminator

Print Test Card

- Print Sample Card

Technology

- Magnetic Encoding

Advanced Security

- Configure Security
- Security Roles

Print Viewer

- Print PRN File

Firmware and Lookup Tables

Select Firmware to Download

Firmware source path

Check Firmware Updates (Internet connection required)

Keep downloaded file locally

Downloaded file path: C:\ProgramData\ZXP Series 8\Firmware

Lookup Tables

Currently applied LUT:

Select LUT to download to printer

Default LUT

Custom LUT

- **Firmware and Settings**



Caution • Do not turn power OFF while the printer is downloading and/or updating the new firmware.

- **Select Firmware to Download:** Use this option to install the firmware downloaded from the Zebra web site at <http://zebra.com> under *Drivers & Downloads*.
 1. Click the **Download** button.
 2. From the Browse window, locate the downloaded firmware (BIN file type); and click the **Open** button.
 3. Read the *ZXP Toolbox* caution message. If you are satisfied with the download, click the **OK** button to install the firmware; otherwise, click the **Cancel** button to abandon the firmware installation.
- **Check Firmware Updates:** Not implemented.