


How to update the ZXPS8 printer driver


Open the folder where you have downloaded the ZXPS8 printer driver.

Select the Setups folder


Double click on the file DZ8GC.XX.XX.XX.XX.exe (xx designate version number)

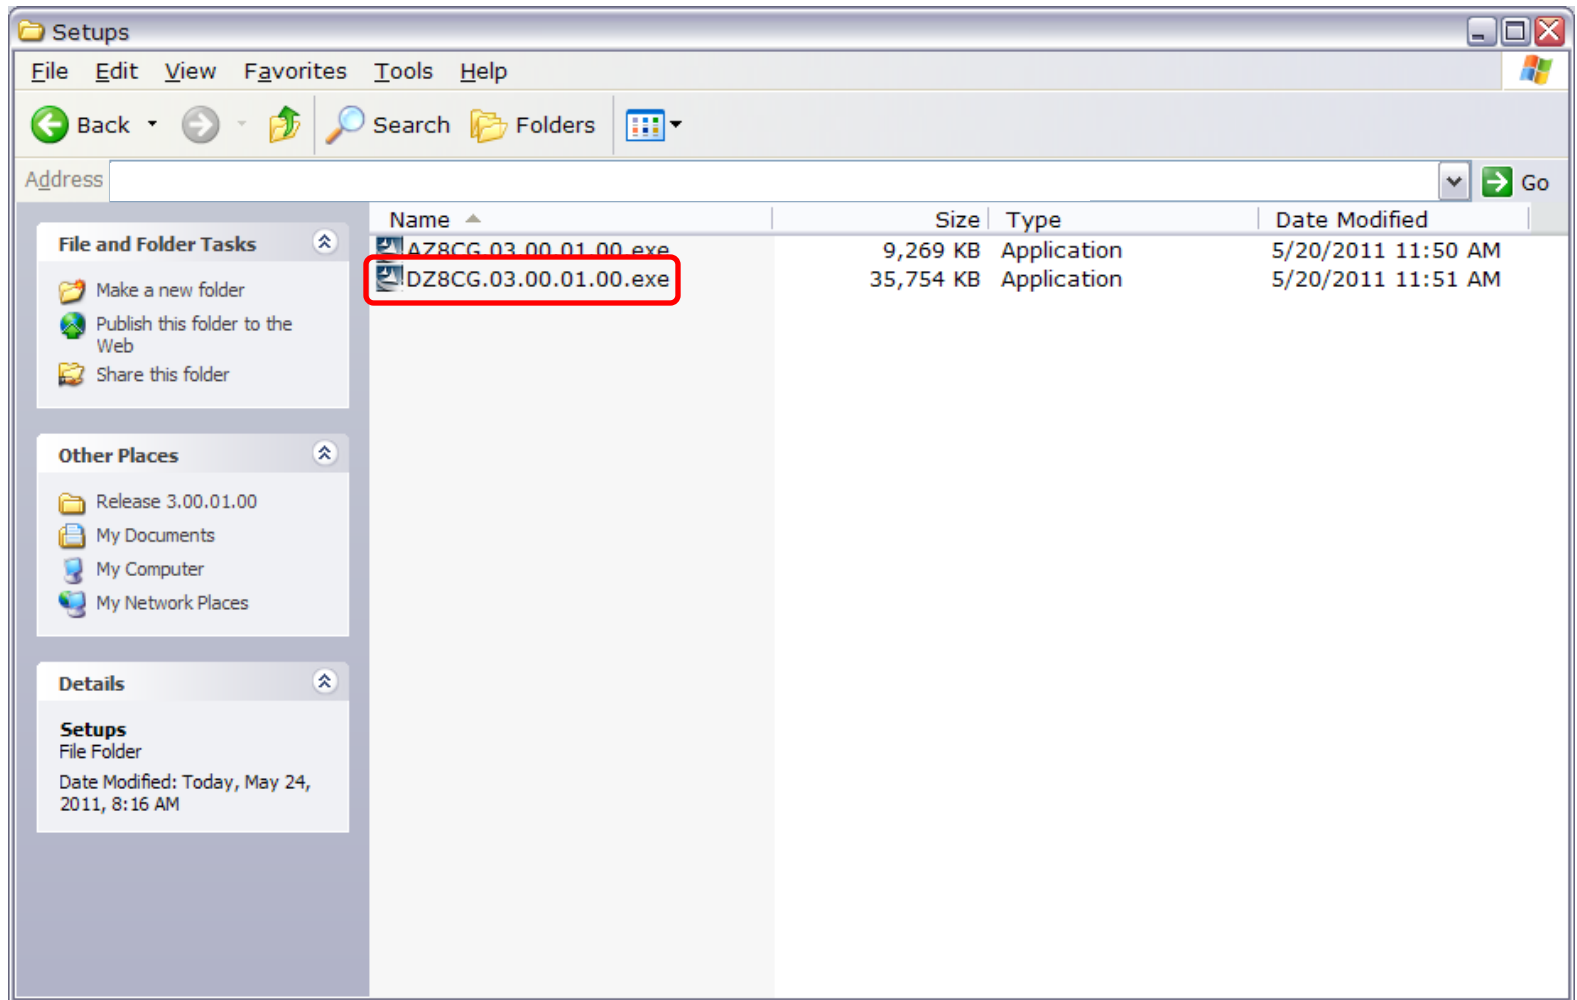


On the next screen you will be asked if you want to Upgrade or Remove. Select Upgrade and click on Next.

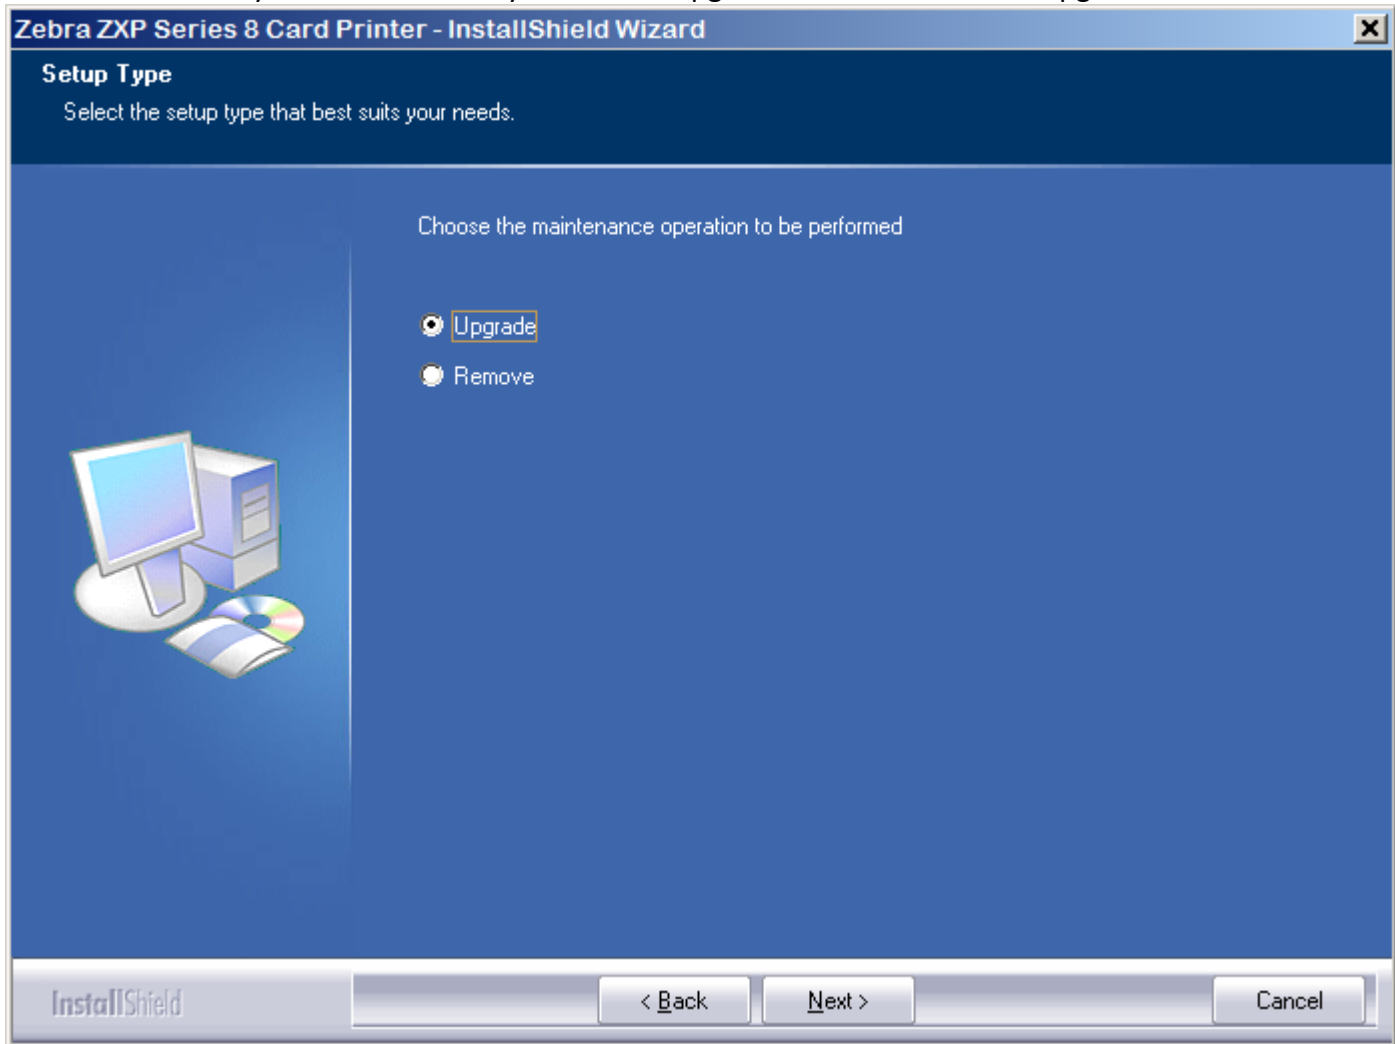


Now you see the Welcome screen. Click Next.

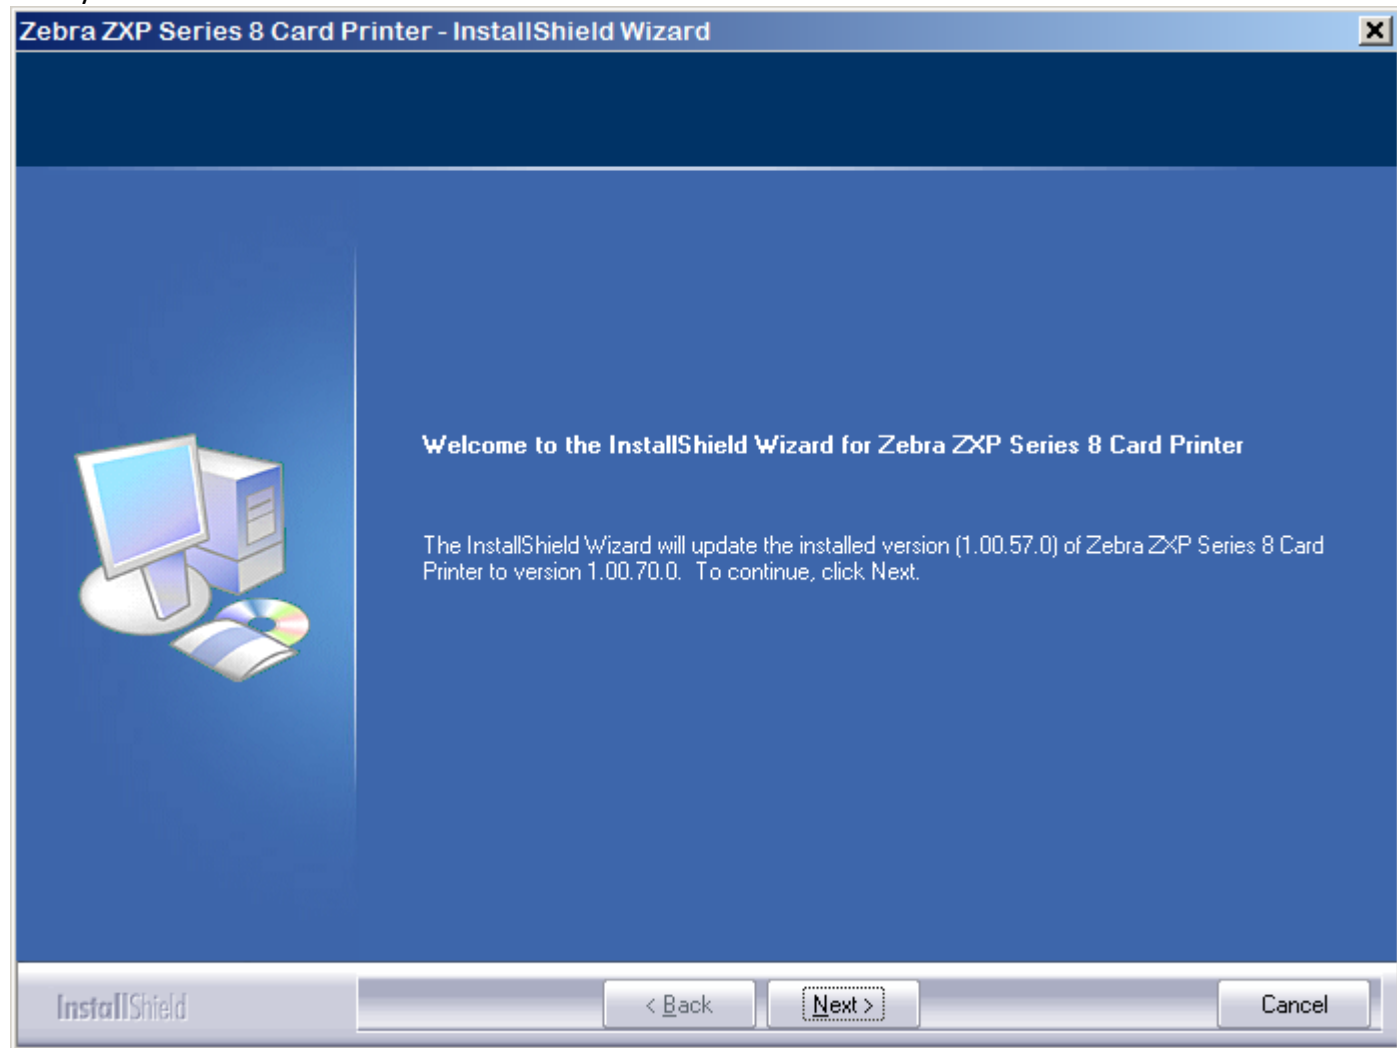

The driver is now installing the update.

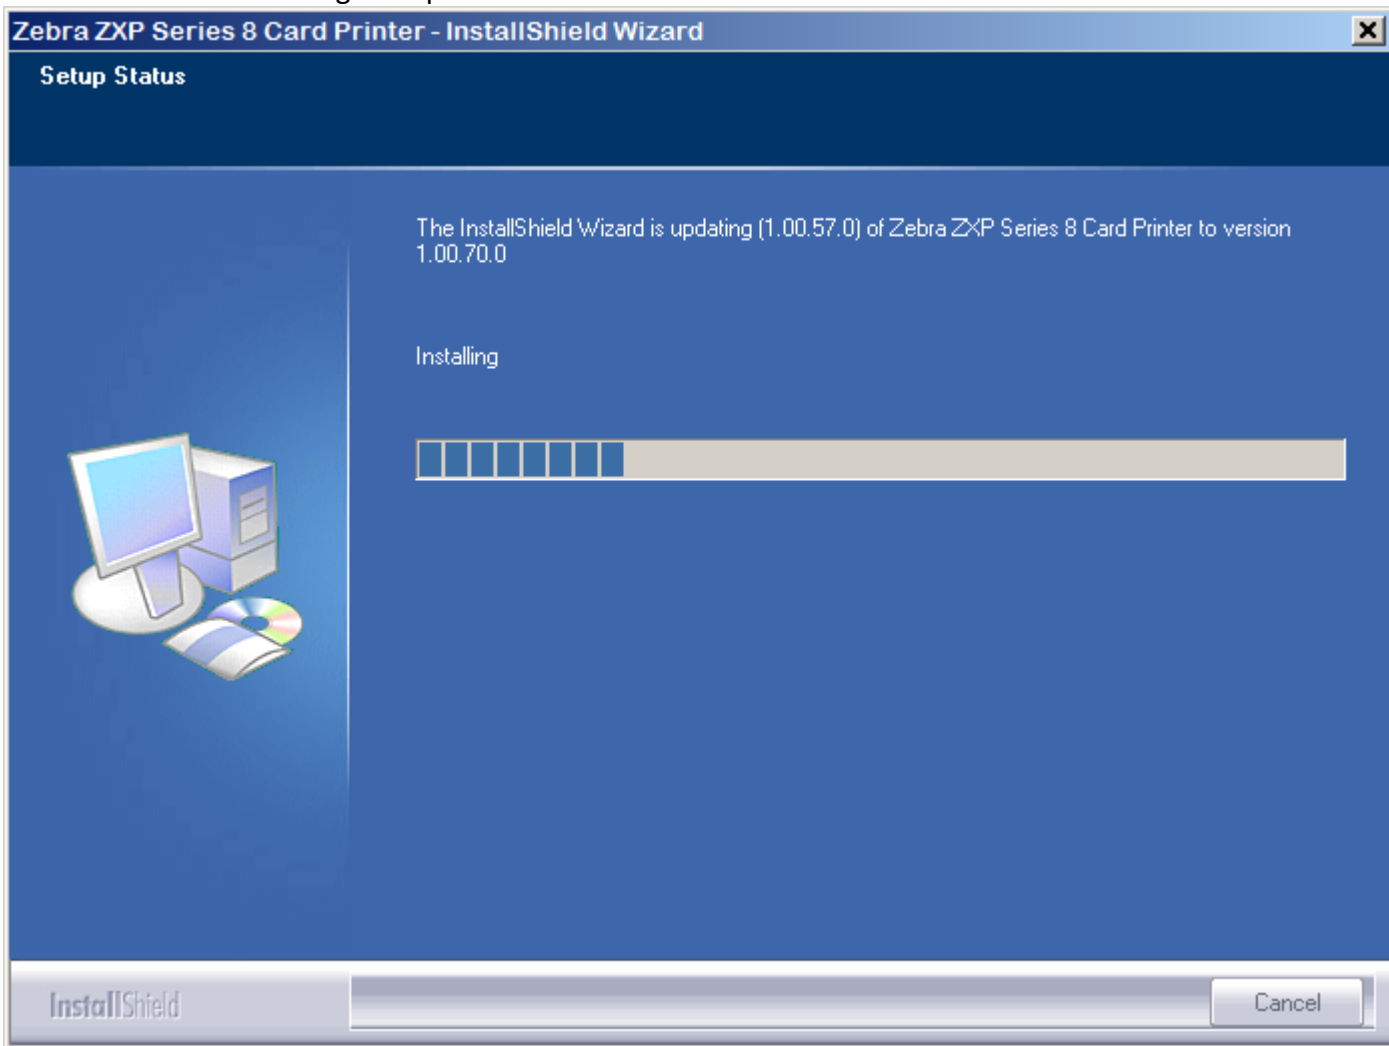

You will next receive the standard Microsoft software installation warning. Please select Continue Anyway.

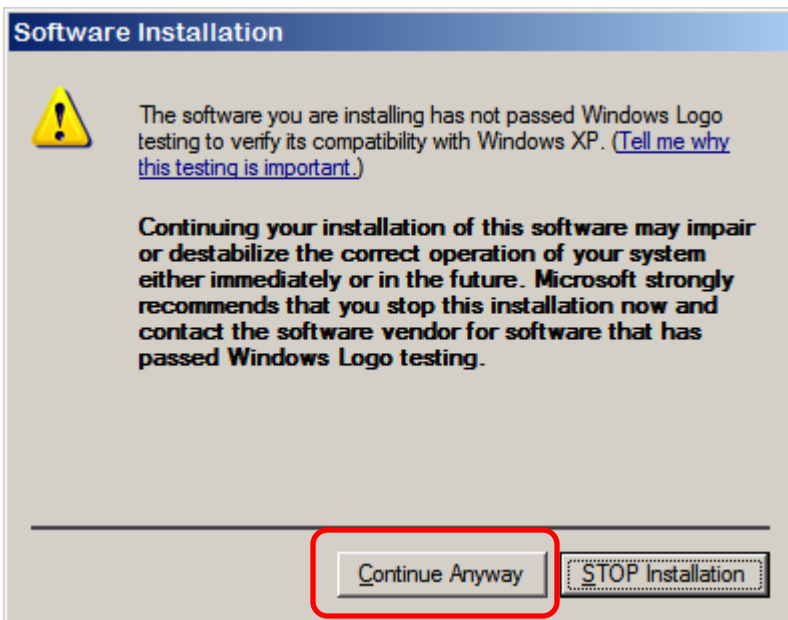

After you are done installing the driver update, you will be asked if you want to restart your printer now or later. The choice is yours.

Please note: Changes will not be applied until your computer is restarted.

