

# odometer.retracts\_count

**Description** This printer value records the number of times a label has been retracted since the last time the counter has been reset.

## Supported Devices

- KR403

**Type** getvar; setvar

Commands	Details
getvar	This command instructs the printer to respond with the current number of retractions that have happened since the last time the counter was reset. <i>Format:</i> ! U1 getvar "odometer.retracts_count"
setvar	This command instructs the printer to reset the current count of retractions. <i>Format:</i> ! U1 setvar "odometer.retracts_count" "value" <i>Values:</i> 0 = reset the counter <i>Default:</i> none



**Note** • For details on SGD command structure, see [Command Structure](#) on page 630.