

5: ZXP Series Toolbox Configuration

Firmware and Lookup Tables



Note • Access to this feature is controlled via Advanced Security > Security Roles.

The Firmware and Lookup Tables screen allows you to install firmware and check for firmware updates. This screen also allows you to download and select custom Lookup Tables.



Caution • **Do not turn power OFF** while the printer is downloading and configuring the new firmware.

ZXP Toolbox - Zebra ZXP Series 7 Network Card Printer

ZXP Series 7 Toolbox
Powered by ZMotif

Information

- Printer
- Printer Sensors
- Media
- Laminator

Configuration

- Job Log
- Save/Restore
- Firmware and Lookup Tables**
- Printer Settings

Cleaning

- Clean Printer
- Clean Laminator

Print Test Card

- Print Sample Card

Technology

- Magnetic Encoding
- Smart Card

Advanced Security

- Configure Security

Print Viewer

- Print PRN File

Firmware and Lookup Tables

Select Firmware to Download

Firmware source path

Check Firmware Updates (Internet connection required)

Keep downloaded file locally

Downloaded file path:

Lookup Tables

Currently applied LUT: ZXP7DefLut1.09.09.11

Select LUT to download to printer

Default LUT ZXP7DefLut1.09.09.11

Custom LUT

- **Select Firmware to Download:** Use this option to install the firmware downloaded from the Zebra web site at <http://zebra.com> under *Support & Downloads*.
 1. Click the **Download** button.
 2. From the Browse window, locate the downloaded firmware (BIN file type); and click the **Open** button.
 3. Read the *ZXP Toolbox* caution message. If you are satisfied with the download, click the **OK** button to install the firmware; otherwise, click the **Cancel** button to abandon the firmware installation.

- **Check Firmware Updates:** To use this option, you must have an internet connection.
 1. Click the **Check Updates** button; then enter the Server name, User name, and Password in the *Ftp Login* pop-up; and click the **OK** button.
 2. Observe the firmware update file(s) displayed in the Filename listing; then select the desired update file from the list; and click the **Download File** button.
 3. As the file is downloaded, observe the % complete bar.
 4. Click the **OK** button when the *Download completed* pop-up appears.
 5. Read the *ZXP Toolbox* caution message. If you are satisfied with the download, click on the **OK** button to install the firmware; otherwise, click the **Cancel** button to abandon the firmware installation.