




Table 15 • Printer Parameters, **Password Level 3** (Page 6 of 10)

Parameter	Explanation
CHANGE RTC TIME	<p><b>Set RTC (Real-time clock) Time</b></p> <p>If RTC is installed, this parameter allows you to set the RTC time.</p> <p> <b>Note</b> • The printer saves the RTC time immediately.</p> <p><b>To modify this parameter:</b></p> <ol style="list-style-type: none"> <li>1. Press ENTER. The printer displays the current RTC time.</li> <li>2. Modify the values as follows: <ul style="list-style-type: none"> <li>• Press the right arrow to move to the next digit position.</li> <li>• To increase the value, press the up arrow.</li> <li>• To decrease the value, press the down arrow.</li> </ul> </li> <li>3. Press ENTER to accept the value shown.</li> </ol>
<b>LOAD DEFAULTS</b>	<p><b>Load Factory Defaults</b></p> <p>Sets all parameters back to factory defaults.</p> <p> <b>Important</b> • Use care when using this command. All printer parameters are reset to factory values with this command. If possible, print a configuration label to have as a record of the printer's settings before loading defaults.</p> <p><b>How to select this parameter:</b></p> <ol style="list-style-type: none"> <li>1. Press ENTER. The printer asks <b>ARE YOU SURE?</b></li> <li>2. To load factory defaults, press ENTER to select <b>YES</b>. To cancel, press any other key.</li> </ol>
DEFAULT NET	<p><b>Reset Network Parameters</b></p> <p>Resets the network parameters back to the factory defaults.</p> <ol style="list-style-type: none"> <li>1. Press ENTER. The printer asks <b>ARE YOU SURE?</b></li> <li>2. To reset network parameters to the factory defaults, press ENTER to select <b>YES</b>. To cancel, press any other key.</li> </ol>
INIT FLASH MEM	<p><b>Initialize Flash Memory</b></p> <p>This parameter allows you to erase the printer's Flash memory.</p> <p> <b>Important</b> • The internal Flash memory is entirely erased with this command.</p> <p><b>To select this parameter:</b></p> <ol style="list-style-type: none"> <li>1. Press ENTER to select <b>YES</b>. The printer asks <b>ARE YOU SURE?</b></li> <li>2. To initialize Flash memory, press ENTER. To cancel, press any other key.</li> </ol>