


Format Prefix Change (Command Character)

Enter Setup Mode

To enter Setup mode, complete these steps:

1. Press MENU.
2. Use the left or right arrow to scroll through the parameters.
3. Advance to LEVEL 3 and enter the PASSWORD 1234 (default), then hit enter.
4. Use the left arrow until you reach COMMAND CHARACTER
5. Read through the table below and enter the desired command character hex value.

COMMAND CHAR (ZPL mode only)	Set Command Character The command prefix is a two-digit hexadecimal value used as a parameter place marker in ZPL/ZPL II format instructions. The printer looks for this two-digit hexadecimal character to indicate the start of a ZPL/ZPL II format instruction. See the <i>ZPL II Programming Guide Volume I</i> for more information.  Note • Do not use the same hexadecimal value for the control, command, and delimiter character. The printer must see different characters to work properly. Range: 00 to FF Default Value: 5E (caret) To modify this parameter: <ul style="list-style-type: none">• To increase the value, press the up arrow.• To decrease the value, press the down arrow.
--	---

Leave Setup Mode

You can leave Setup mode at any time. As you leave Setup mode, you may choose to save or discard changes that you made, or you may return to where you were in Setup mode.

To exit Setup mode, complete these steps:

1. Press MENU.
The printer displays SAVE CHANGES and activates the ENTER button.
2. Do you wish to save changes that were made since you entered Setup mode?

If you wish to...	Then...
Save changes	a. Press ENTER. The printer saves changes and exits Setup mode.