




Table 8 • Printer Parameters (Sheet 3 of 22)

Language/Parameter	Action/Explanation
 MEDIA TYPE -NON-CONTINUOUS +	<p>Set Media Type</p> <p>This parameter tells the printer the type of media that you are using (see <i>Types of Media</i> on page 31 for more information). Selecting continuous media requires that you include a label length instruction in your label format (^Lxxxxx if you are using ZPL or ZPL II).</p> <p>When non-continuous media is selected, the printer feeds media to calculate label length (the distance between two recognized registration points of the inter-label gap, webbing, or alignment notch or hole).</p> <p><i>Default Value:</i> NON-CONTINUOUS <i>Selections:</i> NON-CONTINUOUS, CONTINUOUS</p> <p>To change the value shown:</p> <ol style="list-style-type: none"> 1. Press PLUS (+) or MINUS (-) to scroll through the options.
 SENSOR TYPE -WEB +	<p>Set Sensor Type</p> <p>This parameter tells the printer whether you are using media with a web (gap/space between labels, notch, or hole) to indicate the separations between labels or if you are using media with a black mark printed on the back. If your media does not have black marks for registration on the back, leave your printer at the default (WEB).</p> <p><i>Default Value:</i> WEB <i>Selections:</i> WEB, MARK</p> <p>To change the value shown:</p> <ol style="list-style-type: none"> 1. Press PLUS (+) or MINUS (-) to toggle between the options.
 PRINT METHOD -THERMAL-TRANS. +	<p>Select Print Method</p> <p>The print method parameter tells the printer the method of printing that you want to use: direct thermal (no ribbon) or thermal transfer (using thermal transfer media and ribbon).</p> <p><i>Default Value:</i> THERMAL-TRANS. <i>Selections:</i> THERMAL-TRANS., DIRECT THERMAL</p> <p>To change the value shown:</p> <ol style="list-style-type: none"> 1. Press PLUS (+) or MINUS (-) to scroll through the options.