

## ^JB – Initialize Flash Memory

**Description** The ^JB command is used to initialize various types of Flash memory available in the Zebra printers.

**Format** ^JBa

Parameters	Details
a = device to initialize	<i>Acceptable Values:</i> A = Option Flash memory B = Flash card (PCMCIA) E = internal Flash memory <i>Default Value:</i> a device must be specified



**Example** • This is an example of initializing the different types of flash memory:

- ^JBA – initializes initial Compact Flash memory when installed in the printer.
- ^JBB – initializes the optional Flash card when installed in the printer.
- ^JBE – initializes the optional Flash memory when installed in the printer.



**Note** • Initializing memory can take several minutes. Be sure to allow sufficient time for the initialization to complete before power cycling the printer.