

## ~JD – Enable Communications Diagnostics

**Description** The ~JD command initiates Diagnostic Mode, which produces an ASCII printout (using current label length and full width of printer) of all characters received by the printer. This printout includes the ASCII characters, the hexadecimal value, and any communication errors.

**Format** ~JD

Note: The printer will only print ASCII from the port or network connection the ~JD was received from. (wck)