

^JU – Configuration Update

Description The ^JU command sets the active configuration for the printer.

Format ^JUa

Parameters	Details
a = active configuration	<p><i>Accepted Values:</i></p> <ul style="list-style-type: none">F = reload factory settingsN = reload factory network settings <p>These values are lost at power-off if not saved with ^JUS.</p> <ul style="list-style-type: none">R = recall last saved settingsS = save current settings <p>These values are used at power-on.</p> <p><i>Default Value:</i> a value must be specified</p>