

^ML – Maximum Label Length

Description The ^ML command lets you adjust the maximum label length.

Format ^MLa

Parameters	Details
a = maximum label length (in dot rows)	<i>Accepted Values:</i> 0 to maximum length of label <i>Default Value:</i> last permanently saved value

Comments For calibration to work properly, you must set the maximum label length equal to or greater than your actual label length.

This command is ignored on the HC100™ printer.