

^PW – Print Width

Description The ^PW command allows you to set the print width.

Format ^PWa

Parameters	Details
a = label width (in dots)	<i>Accepted Values:</i> 2, to the width of the label If the value exceeds the width of the label, the width is set to the label's maximum size. <i>Default Value:</i> last permanently saved value

Comments This command is ignored on the HC100™ printer.