

## ^ST – Set Date and Time (for Real-Time Clock)

The ^ST command sets the date and time of the Real-Time Clock.

Format: ^STa,b,c,d,e,f,g

Parameters	Details
a = month	<b>Values:</b> 01 to 12 <b>Default:</b> current month
b = day	<b>Values:</b> 01 to 31 <b>Default:</b> current day
c = year	<b>Values:</b> 1998 to 2097 <b>Default:</b> current year
d = hour	<b>Values:</b> 00 to 23 <b>Default:</b> current hour
e = minute	<b>Values:</b> 00 to 59 <b>Default:</b> current minute
f = second	<b>Values:</b> 00 to 59 <b>Default:</b> current second
g = format	<b>Values:</b> Accepted Values: A = a.m. P = p.m. M = 24-hour military <b>Default:</b> M

For more details on set date and time, see [Real Time Clock on page 1347](#).