

device.friendly_name

This command shows the name assigned to the printer. For printer support, see [SGD Command Support on page 1365](#).

Commands	Details
setvar	This command sets the printer's name. Format: ! U1 setvar "device.friendly_name" "value" Default: "xxxxxxxxxx" ("xxxxxxxxxx" represents the main logic board serial number)
getvar	This command retrieves the name assigned to the printer. Format: ! U1 getvar "device.friendly_name"



Note • For details on SGD command structure, see [Command Structure on page 983](#).



Example: This **setvar** example shows the value set to "xxxxxxxxxx".

```
! U1 setvar "device.friendly_name" "xxxxxxxxxx"
```

When the **setvar** value is set to "xxxxxxxxxx", the **getvar** result is "xxxxxxxxxx".