

Table 8 • Calibration and Diagnostic Tools (Continued)

Load Defaults	Load Printer or Print Server Defaults	
	<ul style="list-style-type: none"> • FACTORY—Restores all printer settings other than the network settings back to the factory defaults. Use care when loading defaults because you will need to reload all settings that you changed manually. • NETWORK—Reinitializes the printer’s wired or wireless print server. With a wireless print server, the printer will also reassociate with your wireless network. • LAST SAVED—Loads settings from the last permanent save. 	
	<i>Accepted values:</i>	<ul style="list-style-type: none"> • FACTORY • NETWORK • LAST SAVED
	<i>Related ZPL command(s):</i>	Factory: ^JUF Network: ^JUN Last saved: ^JUR
	<i>SGD command used:</i>	none
	<i>Control panel menu item:</i>	LOAD DEFAULTS
	<i>Control panel key(s):</i>	Factory: Hold FEED + PAUSE during printer power-up to reset the printer parameters to factory values. Network: Hold CANCEL + PAUSE during printer power-up to reset the network parameters to factory values. Last saved: N/A
	<i>Printer web page:</i>	Factory: View and Modify Printer Settings > Restore Default Configuration Network: Print Server Settings > Reset Print Server Last saved: View and Modify Printer Settings > Restore Saved Configuration