

Table 7 • Print Settings (Continued)

Print Method	Specify if the printer is to use Direct Thermal mode (no ribbon) or Thermal Transfer mode (using thermal transfer media and ribbon).				
<i>Accepted values:</i>	<ul style="list-style-type: none"> • THERMAL TRANS • DIRECT THERMAL 				
<i>Related ZPL command(s):</i>	^MT				
<i>SGD command used:</i>	ezpl.print_method				
<i>Control panel menu item:</i>	PRINT METHOD				
<i>Printer web page:</i>	View and Modify Printer Settings > Media Setup > Print Method				
Tear-Off Position	<p>If necessary, adjust the position of the media over the tear-off bar after printing.</p> <ul style="list-style-type: none"> • Higher numbers move the media out (the tear line moves closer to the leading edge of the next label). • Lower numbers move the media in (the tear line moves closer to the edge of the label just printed). <div data-bbox="690 835 1133 1159" style="text-align: center;"> </div> <table border="1" data-bbox="542 1184 1269 1264" style="margin-left: auto; margin-right: auto;"> <tr> <td style="text-align: center;">1</td> <td>Media direction</td> </tr> <tr> <td style="text-align: center;">2</td> <td>Factory-set tear line location at position 000</td> </tr> </table>	1	Media direction	2	Factory-set tear line location at position 000
1	Media direction				
2	Factory-set tear line location at position 000				
<i>Accepted values:</i>	-120 to 120				
<i>Related ZPL command(s):</i>	~TA				
<i>SGD command used:</i>	ezpl.tear_off				
<i>Control panel menu item:</i>	TEAR OFF on page 21				
<i>Printer web page:</i>	View and Modify Printer Settings > General Setup > Tear Off				