

Select a Print Mode

Use a print mode that matches the media being used and the printer options available (Table 6).

Table 6 • Print Modes and Printer Options

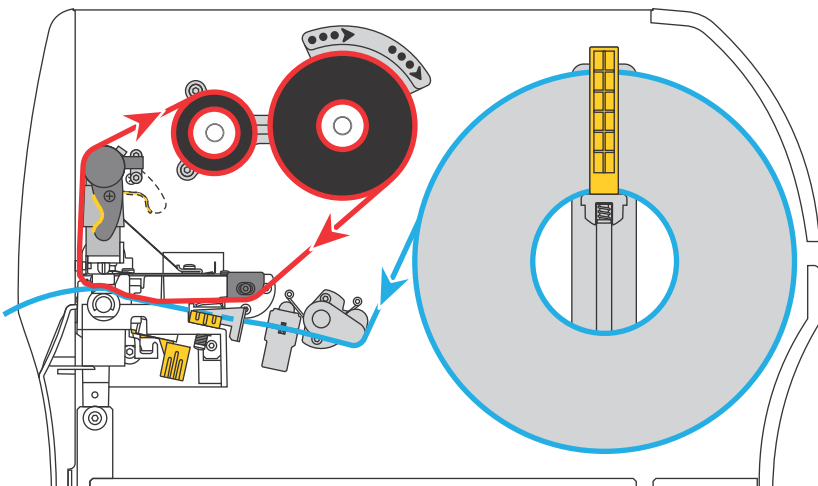
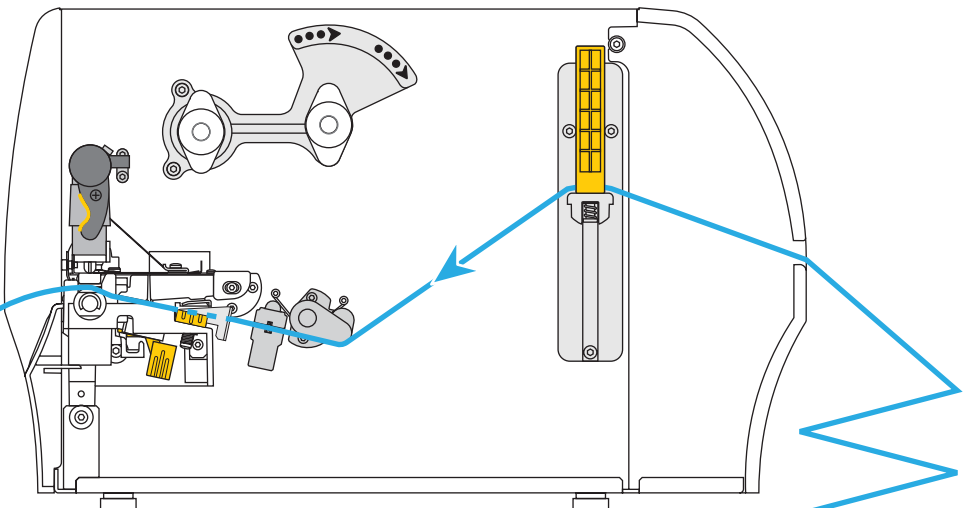
Print Mode	When to Use/Printer Options Required	Printer Actions
Tear-Off (default setting)	Use for most applications. This mode can be used with any printer options and most media types.	The printer prints label formats as it receives them. The printer operator can tear off the printed labels any time after they print.
<p style="text-align: center;">Roll media in Tear-Off mode (shown using thermal transfer media with ribbon loaded)</p>  <p style="text-align: center;">Fanfold media in Tear-Off mode (shown using direct thermal media and no ribbon)</p> 		

Table 6 • Print Modes and Printer Options

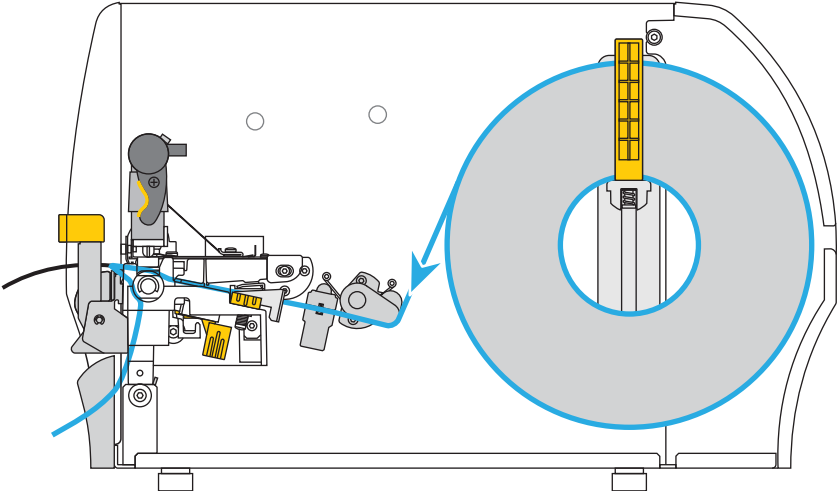
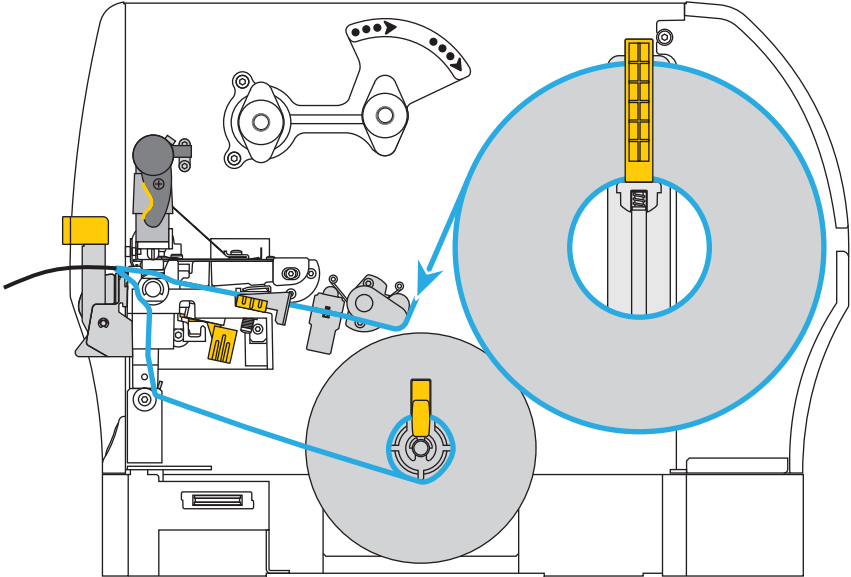
Print Mode	When to Use/Printer Options Required	Printer Actions
Peel-Off	<p>Use if the printer has the Peel-Off option or the Liner Take-Up option.*</p> <p>* The Liner Take-Up option is available only on the ZT230 printer.</p>	<p>The printer peels the label from the liner during printing and then pauses until the label is removed. The liner exits the front of the printer.</p> <ul style="list-style-type: none"> • In Peel-Off mode, the liner exits the front of the printer. • In Peel-Off mode with Liner Take-Up, the liner winds onto the liner take-up spindle or the rewind spindle.
<p>Peel-Off mode (shown without a ribbon system)</p>  <p>Peel-Off mode with Liner Take-Up* (shown using direct thermal media and no ribbon)</p> 		

Table 6 • Print Modes and Printer Options

Print Mode	When to Use/Printer Options Required	Printer Actions
Cutter	Use if the printer has a cutter option when you want the labels to be cut apart.	The printer prints a label and then cuts it free. <p style="text-align: center;">Cutter mode (shown using direct thermal media and no ribbon)</p> 