



Sensor Settings

Table 11 • Sensor Settings

Sensor Type	Select the Media Sensor	
	Select the media sensor that is appropriate for the media that you are using. The reflective sensor can be used with all media types. The transmissive sensor should be used only for simple gap media.	
	<i>Accepted values:</i>	<ul style="list-style-type: none"> • TRANSMISSIVE • REFLECTIVE
	<i>Related ZPL command(s):</i>	^JS
	<i>SGD command used:</i>	device.sensor_select
	<i>Control panel menu item:</i>	SENSOR TYPE (ZT230)
<i>Printer web page:</i>	View and Modify Printer Settings > Media Setup	
Label Sensor	Set the Sensitivity of the Label Sensor	
	 Important • This value is set during sensor calibration. Do not change this setting unless you are told to do so by Zebra Technical Support or by an authorized service technician.	
	<i>Accepted values:</i>	0 – 255
	<i>Related ZPL command(s):</i>	none
	<i>SGD command used:</i>	ezpl.label_sensor
	<i>Control panel menu item:</i>	LABEL SENSOR on page 34
<i>Printer web page:</i>	View and Modify Printer Settings > Calibration	
Take Label	Set the Intensity of the Take Label LED	
	 Important • This value is set during sensor calibration. Do not change this setting unless you are told to do so by Zebra Technical Support or by an authorized service technician.	
	<i>Accepted values:</i>	0 – 255
	<i>Related ZPL command(s):</i>	none
	<i>SGD command used:</i>	ezpl.take_label
	<i>Control panel menu item:</i>	TAKE LABEL on page 35
<i>Printer web page:</i>	View and Modify Printer Settings > Calibration	