

Cleaning the Printer



NOTE • To order a **Printer Cleaning Kit**, go to <http://www.zebra.com/supplies>.

When to Clean

Cleaning requirements vary according to the environment. For a typical office environment, the recommended cleaning cycle is:

- Card Path cleaning should occur every 5,000 cards.
- Feeder Path cleaning should occur every 5,000 cards.

Initiate the Cleaning Process


- Step 1.** Press the MENU button on the Operator Control Panel (OCP). The OCP will display the **Main Menu**.
- Step 2.** Scroll through the Main Menu, and select Advanced Settings. The OCP will display the **Advanced Settings Menu**.
- Step 3.** Scroll through the Advanced Settings Menu, and select Clean Printer. The OCP will display the **Clean Printer Menu**.

Clean the Card Path



NOTE • Do not use previously used cleaning cards.

- Step 1.** From the Clean Printer Menu, select *CLEAN CARD PATH*.
- Step 2.** Use the Printer Cleaning Card, and follow the OCP instructions.
- Step 3.** Open print cover, open ribbon drawer, remove ribbon, and then press *Next*.
- Step 4.** Close ribbon drawer, close print cover, and then press *Next*.
- Step 5.** Insert long cleaning card in Manual Feed Slot, and then press *Clean*.

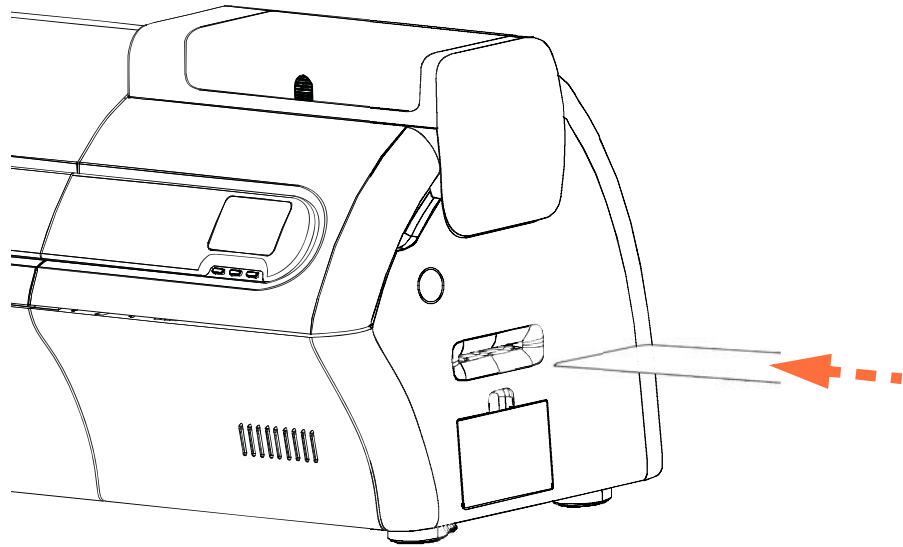


- Step 6.** Wait while cleaning process completes. The card will eject through same slot.
- Step 7.** Flip the cleaning card, reinsert it in the Manual Feed Slot, and then press *Clean*.
- Step 8.** Wait while cleaning process completes. The card will eject through same slot.
- Step 9.** Replace the ribbon, and press *Next*.
- Step 10.** The OCP will return to the Clean Printer Menu.

Clean the Feeder Path



NOTE • Do not use previously used cleaning cards.

- Step 1.** From the Clean Printer Menu, select *CLEAN FEEDER*.
- Step 2.** Use the Feeder Cleaning Card, and follow the OCP instructions.
- Step 3.** Remove all cards from feeder cartridge, and then press *Next*.
- Step 4.** Insert short cleaning card in top slot, then press *Clean*.
- Step 5.** Press yellow button in feeder cartridge to release pusher plate, and then press *Next*.

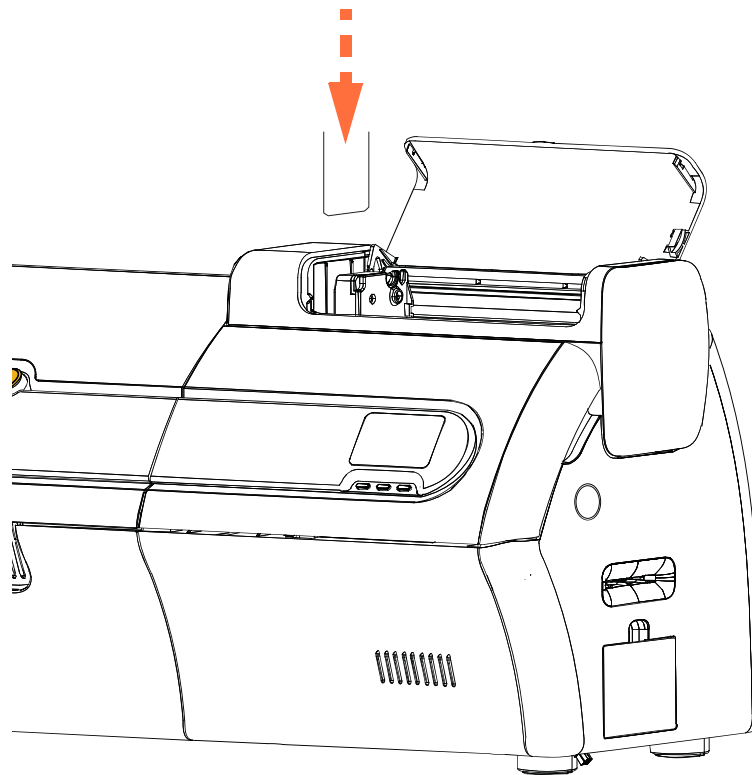

- Step 6.** Wait while cleaning process completes. The card will eject through same slot.
- Step 7.** Flip the cleaning card, reinsert it in top slot, and then press *Clean*.
- Step 8.** Wait while cleaning process completes. The card will eject through same slot.
- Step 9.** The OCP will return to the Clean Printer Menu.
- Step 10.** Load the cards back into the feeder cartridge.