

U

Print Configuration (General)

Description Use this command to print the current printer configuration for page mode printing. The printout is the same the Dump Mode printout initiated by the printer's AutoSense routine. The printer does not enter Dump Mode. See *Explanation of the Status Printout on page 36* for a description of this printout.

Syntax U

Parameters There are no parameters for this format.



Example • The configuration label below is produced by this command:


U↓

```
UK01935HLU      V4.59
Serial port:96,N,8,1
Page Mode
Image buffer size:0245K
Fmem used: 0 (bytes)
Gmem used: 0
Emem used: 29600
Available: 100959
I8,0,001 rY JF WY
S4 D10 R0,0 ZT UN
q832 01016,24
Option:D,Ff
oEv,u,x,y,z
06 11 18
Cover: T=143, C=166
```

Explanation of the Status Printout

Depending on your printer model, your configuration label will look similar to one of those shown below. See [Figure 10 on page 325](#) for additional information.

Figure 4 • Configuration Label Print Samples

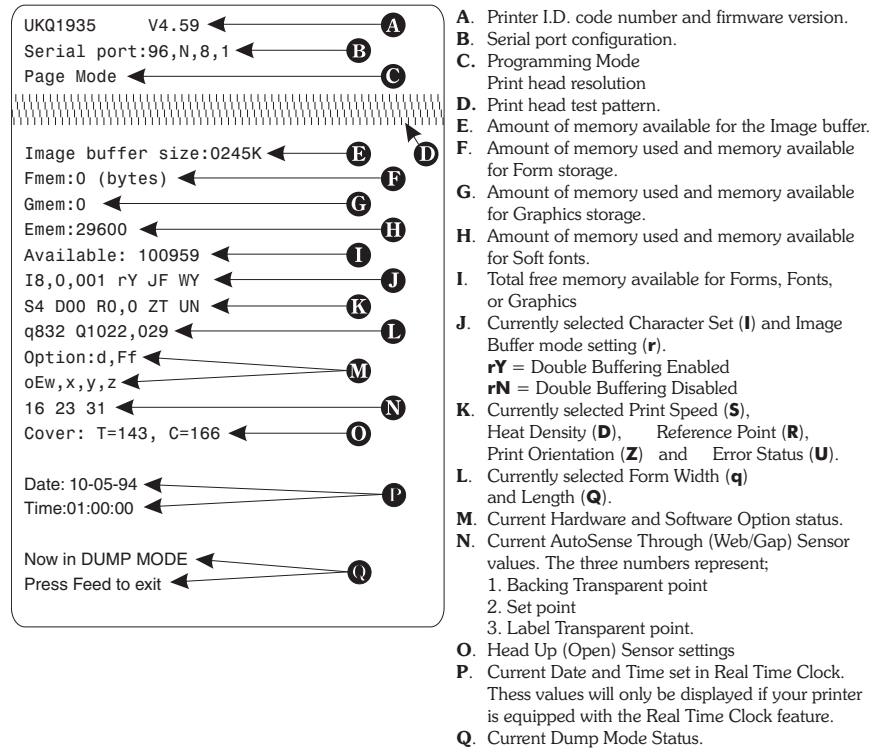

Dump Mode Character Map

The printer's Dump Mode is used to troubleshoot programming. The printer will print all data as sent in Dump Mode Characters, shown below.

Figure 10 • Dump Mode Character Map

0123456789ABCDEF	
0	°@⊕♥♦♣♠•◻◻♂♀♪♫☼
1	▶◀↑!!π\$ _ ± ↑ ↓ → ← ↲ ↳ ▲ ▼
2	!"#\$%&'()*+,-./
3	0123456789:;<=>?
4	@ABCDEFGHIJKLMNO
5	PQRSTUVWXYZ[\]^_
6	'abcdefghijklmnop
7	qrstuvwxyz{ }~Δ
8	ÇüéâãäåçêëèìíîÏÄÅ
9	ÉæffôöòûüÿöÜø£Ø×f
A	áíóúñÑªº¿@-½¼¡«»
B	⌘⌘⌘ †ÁÂÀ⊙ η♯ç¥₧
C	ℒℒℒ†-†ãÃℒℒℒ=†⊗
D	öÐÉÈÈìí}ìℒℒℒìì
E	óβôòõöμϐÚÛÜýÝ
F	-±=¼π\$÷˘°···132■²₃
0123456789ABCDEF	