


**Table 1 • Print Settings (Continued)**

<b>Reprint Mode</b>	When reprint mode is enabled, you can reprint the last label printed by pressing and holding PAUSE + CANCEL on the printer’s control panel.							
	<i>Accepted values:</i>	<ul style="list-style-type: none"> <li>• ON</li> <li>• OFF</li> </ul>						
	<i>Related ZPL command(s):</i>	^JZ						
	<i>SGD command used:</i>	ezpl.reprint_mode						
	<i>User menu item:</i>	REPRINT MODE on page 95						
	<i>Printer web page:</i>	N/A						
<b>Maximum Label Length</b>	<p>Set the maximum label length to a value that is at least 1.0 in. (25.4 mm) greater than the actual label length plus the interlabel gap. If you set the value to one that is smaller than the label length, the printer assumes that continuous media is loaded, and the printer cannot calibrate.</p> <p>For example, if the label length is 6.0 inches (152 mm) including the interlabel gap, set the parameter for at least 7.0 inches (178 mm).</p> <div style="text-align: center;"> <p>The diagram shows two identical labels stacked vertically. Dimension 1 is a vertical double-headed arrow indicating the height of the top label. Dimension 2 is a horizontal double-headed arrow indicating the gap between the two labels. Dimension 3 is a vertical double-headed arrow indicating the total height from the top of the first label to the bottom of the second label, including the gap.</p> </div> <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td style="text-align: center;"><b>1</b></td> <td>Label length (including interlabel gap)</td> </tr> <tr> <td style="text-align: center;"><b>2</b></td> <td>Interlabel gap</td> </tr> <tr> <td style="text-align: center;"><b>3</b></td> <td>Set the maximum label length to approximately this value</td> </tr> </table>		<b>1</b>	Label length (including interlabel gap)	<b>2</b>	Interlabel gap	<b>3</b>	Set the maximum label length to approximately this value
<b>1</b>	Label length (including interlabel gap)							
<b>2</b>	Interlabel gap							
<b>3</b>	Set the maximum label length to approximately this value							
<i>Accepted values:</i>	0 to the maximum label length supported by the printer							
<i>Related ZPL command(s):</i>	^ML							
<i>SGD command used:</i>	ezpl.label_length_max							
<i>User menu item:</i>	LABEL LENGTH MAX on page 96							
<i>Printer web page:</i>	View and Modify Printer Settings > Media Setup > Maximum Length							

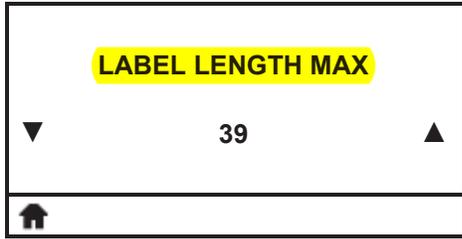

### Set the Maximum Label Length

Set the maximum label length to a value that is at least 1.0 in. (25.4 mm) greater than the actual label length plus the interlabel gap. If you set the value to one that is smaller than the label length, the printer assumes that continuous media is loaded, and the printer cannot calibrate.

See *Maximum Label Length* on page 70 for more information.




### Select the Display Language

If necessary, change the language that the printer displays. See *Language* on page 83 for more information.




**Note** • The selections for this parameter are displayed in the actual languages to make it easier for you to find one that you are able to read.

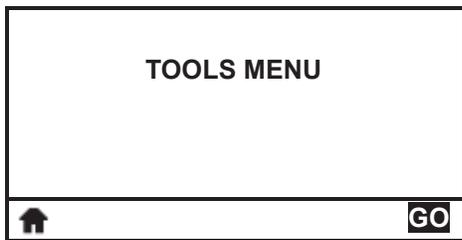

### Tools Menu Shortcut

- To be taken to the next user menu, press OK or press RIGHT SELECT to select GO.

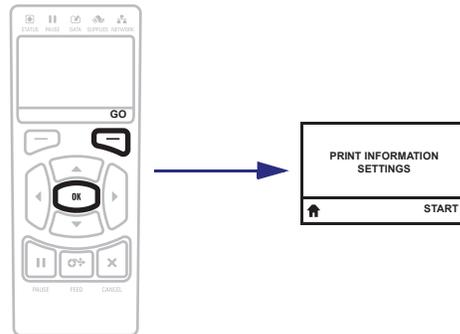

- To continue to navigate in the same user menu, press the LEFT ARROW or RIGHT ARROW.

