
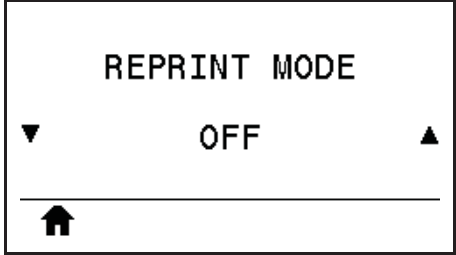


Table 5 • Print Settings (Continued)

Reprint Mode	When reprint mode is enabled, you can reprint the last label printed by pressing and holding PAUSE + CANCEL or by pressing the DOWN ARROW when at the printer's Idle Display.	
<i>User menu item:</i>		Main Menu >  SETTINGS 
<i>Accepted values:</i>	<ul style="list-style-type: none"> • ON • OFF 	
<i>Related ZPL command(s):</i>	^JZ	
<i>SGD command used:</i>	ezpl.reprint_mode	