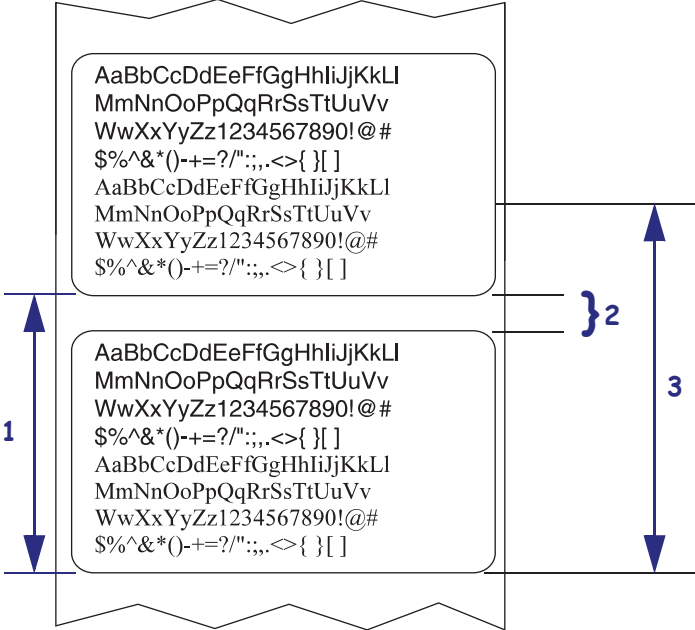


Table 10 • Printer Parameters (Page 5 of 19)

Parameter	Action/Explanation						
<table border="1"> <tr> <td colspan="2">MAXIMUM LENGTH</td> </tr> <tr> <td>39.0IN</td> <td>988MM</td> </tr> </table>	MAXIMUM LENGTH		39.0IN	988MM	<p>Set Maximum Label Length</p> <p>This parameter is used during the media portion of the calibration process. Always set maximum label length to a value that is at least 1.0 in. (25.4 mm) greater than the actual label length (Figure 19). If the value is set to a smaller value than the label length, the printer assumes that continuous media is loaded, and the printer cannot calibrate.</p> <p>For example, if the label length is 5.0 inches (126 mm) including the interlabel gap, set the parameter for 6.0 inches (152 mm). If the label length is 7.5 inches (190 mm), set the parameter for 9.0 inches (229 mm).</p>		
MAXIMUM LENGTH							
39.0IN	988MM						
<p style="text-align: center;">Figure 19 • Label Length</p>  <table border="1" data-bbox="654 1392 1344 1535"> <tr> <td>1</td> <td>Label length (including interlabel gap)</td> </tr> <tr> <td>2</td> <td>Interlabel gap</td> </tr> <tr> <td>3</td> <td>Set maximum label length to approximately this value</td> </tr> </table>		1	Label length (including interlabel gap)	2	Interlabel gap	3	Set maximum label length to approximately this value
1	Label length (including interlabel gap)						
2	Interlabel gap						
3	Set maximum label length to approximately this value						
<p>Default: 39.0 inches (988 mm).</p> <p>Range: Values are adjustable in one-inch (25.4 mm) increments.</p> <p>To change the value shown:</p> <ol style="list-style-type: none"> 1. Press PLUS (+) to increase the value. 2. Press MINUS (-) to decrease the value. 							